

## NE08ENE16E 在VRP5.30从冷备份设置成热备份的方法

NE08E从VRP3.10升级到VRP5.30版本后，系统缺省处于冷备份，需要设置成热备份，操作过程如下：

### 1、查询冷热备份命令行，如果是冷备份执行下步操作

```
<NE08E >dis hsc state
System frame type: NE08E
Master slot: 6; Slave slot: 8, Slave state: Good
Debug switch: IPC off, Interrupt off
System backup mode designated: Cool backup
Master backup state: Cool backup
Slave backup state: Cool backup
Master/Slave configuration auto-sync switch: On
CPCISStatusMachine state:Enable
CPCISStatusMachine TimeOut:60s
< NE08E>
```

### 2、设置热备份方式

#### 2.1 设置当前主控板为热备份方式

```
[NE08E]slave backup warm
Set system backup mode as warm backup!
```

#### 2.2 执行主备倒换

```
[NE08E]reboot
```

**NE08E升级到VRP5.3版本后reboot命令只能reboot当前的主用主控板，要整机重启要使用命令hsc reset system**

#### 2.3 主备倒换之后，将Console线插到原备用主控板的串口，设置为热备份模式

```
[NE08E]slave backup warm
Set system backup mode as warm backup!
```

#### 2.4 检查是否主备板都设置为热备份方式，如果没有要都到还未设置的主控板上设置

```
< NE08E >dis hsc state
System frame type: NE08E
Control mode: Double domains
Master slot: 8; Slave slot: 6, Slave state: Good
Debug switch: IPC off, Interrupt off
System backup mode designated: Warm backup
Master backup state: Warm backup
Slave backup state: Warm backup
Master/Slave configuration auto-sync switch: On
CPCISStatusMachine state:Enable
CPCISStatusMachine TimeOut:60s
< NE08E >
```

#### 2.5 路由器整机重启

```
[NE08E]hsc reset system
```