

AR系列路由器与cisco路由器常用语音命令对比

AR系列路由器	Cisco路由器	命令含义
entity <i>number</i> pots	dial-peer voice <i>number</i> pots	配置pots语音实体
entity <i>number</i> voip	dial-peer voice <i>number</i> voip	配置voip语音实体
match-template <i>number</i>	destination-pattern <i>number</i>	配置匹配号码模板
Address ip <i>ip-address</i>	Session target ipv4: <i>ip-address</i>	配置被叫网关的ip地址
compression { 1st-level 2nd-level 3rd-level 4th-level } { g711alaw g711ulaw g723r53 g723r63 g729a g729ab g729br8 g726r16 g726r24 g726r32 g726r40 }	codec{ g711alaw g711ulaw g723ar53 g723ar63 g723r53 g723r63 g728 g729r8 g729br8 g726r16 g726r24 g726r32 gsmefr gsmfr }	用来配置语音编解码方式
line <i>line-number</i>	port <i>port-number</i>	将语音实体与指定的语音口相关联
prefix-dial 01	prefix 01	配置前缀号码
isdn protocol-type qsig	isdn switch-type primary-qsig	isdn信令类型qsig
isdn bch-select-way ascending	isdn bchan-number-order ascending	ISDN B信道使用顺序为升序
pri-set timeslot-list Timeslots -range	pri-group timeslots Timeslots-range	在E1Vl或者T1Vl接口视图下定义PRI组