



S9500交换机配置DHCP Server和DHCP Relay的方法

孟维佳 2006-12-21 发表

可以通过以下命令来配置DHCP Relay:

1. 使能DHCP

```
[S9500] dhcp enable
```

2. 配置VLAN接口地址

```
[S9500]vlan 2
```

```
[S9500-vlan2]interface vlan 2
```

```
[S9500-Vlan-interface2]ip address 202.38.1.1 24
```

3. 启用DHCP Relay功能

```
[S9500-Vlan-interface2]dhcp select relay
```

```
[S9500-Vlan-interface2]ip relay address 202.38.1.2
```

可以通过以下命令来配置DHCP Sever:

1. 使能DHCP

```
[S9500] dhcp enable
```

2. 配置全局地址池

```
[S9500] dhcp server ip-pool address
```

```
[S9500-dhcp-address] network 61.121.0.0 16
```

3. 配置接口地址池

```
[S9500]vlan 2
```

```
[S9500-vlan2]interface vlan 2
```

```
[S9500-Vlan-interface2]ip address 61.113.1.1 24
```

```
[S9500-Vlan-interface2]dhcp select interface
```

注: 系统默认先从全局地址池分配地址