



How to View and Clear the Flow Information of a Port

刘志伟 2007-01-25 发表

To view the flow information of the port:

```
display interface [ interface-type | interface-type interface-number ]
```

To clear the flow information of the port:

User view

```
reset counters interface [ interface-type | interface-type interface-number ]
```