



## How to Check and Configure System Time/Timezone

刘志伟 2007-01-25 发表

Check the system time/timezone:

```
[S9500] display clock
```

```
17:54:08 UTC Thu 2006/08/03
```

Configure the system time:

```
clock datetime HH:MM:SS YYYY/MM/DD
```

Configure the system timezone:

```
clock timezone zone-name { add | minus } HH:MM:SS
```