



How to Configure DHCP Server and DHCP Relay

刘志伟 2007-01-25 发表

S9500 support DHCP Relay. The configurations are as follows:

1. Enable DHCP:

```
[S9500] dhcp enable
```

2. Configure the VLAN interface address:

```
[S9500]vlan 2
```

```
[S9500-vlan2]interface vlan 2
```

```
[S9500-Vlan-interface2]ip address 202.38.1.1 24
```

3. Enable DHCP Relay:

```
[S9500-Vlan-interface2]dhcp select relay
```

```
[S9500-Vlan-interface2]ip relay address 202.38.1.2
```

S9500 support DHCP Server. The configurations are as follows:

1. Enable DHCP:

```
[S9500] dhcp enable
```

2. Configure the global address pool:

```
[S9500] dhcp server ip-pool address
```

```
[S9500-dhcp-address] network 61.121.0.0 16
```

3. Configure the vlan interface address pool:

```
[S9500]vlan 2
```

```
[S9500-vlan2]interface vlan 2
```

```
[S9500-Vlan-interface2]ip address 61.113.1.1 24
```

```
[S9500-Vlan-interface2]dhcp select interface
```

Note: Addresses are distributed from the global address pool by default.