

知 VTY User Login Password Is Displayed in Ciphertext

刘志伟 2007-01-25 发表

In S9500 versions, password is displayed in ciphertext by default. You can change the display mode to simple text with the following command:

```
[S9500] local-user password-display-mode auto
[S9500] display current-configuration configuration user-interface
#
user-interface con 0
user-interface aux 0
user-interface vty 0 3
set authentication password simple ssss
user-interface vty 4
authentication-mode scheme
set authentication password simple ssss
```