

知 Does the Port Number of the S9500 Aggregation Port Need to be Continuous

孟维佳 2007-01-31 发表

The aggregation ports of the same aggregation group are configured with the configuration command and need not to be continuous. The **link-aggregation** *interface-name1* to *interface-name2* command cannot set the aggregation port continuous while configuring link aggregation. Use the **link-aggregation group** *agg-id* command to create an aggregation group and then add the ports to the aggregation group in port mode, and the port need not be continuous.

Example: Add ports E4/1/1 and E4/1/3 to the aggregation group

```
[S9500]link-aggregation group 1 mode manual
```

```
[S9500]interface e4/1/1
```

```
[S9500-Ethernet4/1/1] port link-aggregation group 1
```

```
[S9500]interface e4/1/3
```

```
[S9500-Ethernet4/1/3] port link-aggregation group 1
```