

Does the Port Number of the S9500 Aggregation Port Need to be Continuou

孟维佳 2007-01-31 发表

The aggregation ports of the same aggregation group are configured with the configu ration command and need not to be continuous. The link-aggregation interface-nam e1 to interface-name2 command cannot set the aggregation port continuous while co nfiguring link aggregation. Use the **link-aggregation group** agg-id command to crea te an aggregation group and then add the ports to the aggregation group in port mode, and the port need not be continuous.

Example: Add ports E4/1/1 and E4/1/3 to the aggregation group

[S9500]link-aggregation group 1 mode manual

[S9500]interface e4/1/1

[S9500-Ethernet4/1/1] port link-aggregation group 1

[S9500]interface e4/1/3

[S9500-Ethernet4/1/3] port link-aggregation group 1