

知 如何IV5000的CLI界面中查看LSI 光纤HBA卡的信息

其它功能 安恒 2007-02-02 发表

可以利用lsiutil -p 1 -i -s 查看lsi光纤通道卡端口1的设置及连接的targets, 包括拓扑类型, 速率、wwpn号, 当前所识别的存储信息 (注意: lsiutil命令下, 光纤通道卡端口编号从1开始)。

```
IV5200-1:~ # lsiutil -p 1 -i -s
LSI Logic MPT Configuration Utility, Version 1.36, June 2, 2005
4 MPT Ports found
=====
/proc/mpt/ioc0   LSI Logic FC929XL   MPT Rev 103   Firmware Rev 01020b00
Current Port State
-----
FC929XL's link is offline
Software Version Information
-----
Firmware image's version is LSIFC929X-1.02.11 (4/29/2005)
  Lsi Logic Corporation
x86 BIOS image's version is FC MPTBIOS-2.02.00 (2004.02.10)
FCode image's version is MPT FC FCode Version 1.00.33 (2005.01.20)
Firmware Settings
-----
Link Topology:           NL Port
Link Speed:              Auto
FCP Initiator protocol:  Enabled
FCP Target protocol:    Enabled
LAN protocol:            Disabled
Assignment of Bus/Target IDs: SortByWWN
Immediate Error Reply:  Disabled
Maintain Logins:         Disabled
Hard AL PA:              ff
Initiator Device Timeout: 60
Initiator I/O Pending Timeout: 8
Multi-pathing:           Enabled
Interrupt Coalescing:    Disabled
Persistent Mappings
-----
No persistent entries found

  B   T   L  Type      Vendor      Product      Rev      WWPN          PortId
-----
      FC929XL Port          100000062b0dc2f0  fffff
IV5200-1:~ #
```