



NE16E/08E/05产品ping vpn地址的时候必须带源地址问题

对于V3版本，NE16E/08E/05产品ping vpn地址的时候必须带源地址，例子如下：

```
[NE05]ping -a 10.1.1.1 -vpn-instance vpn1 192.168.1.2
PING 192.168.1.2: 56 data bytes, press CTRL_C to break
  Reply from 192.168.1.2: bytes=56 Sequence=1 ttl=254 time = 5 ms
  Reply from 192.168.1.2: bytes=56 Sequence=2 ttl=254 time = 3 ms
  Reply from 192.168.1.2: bytes=56 Sequence=3 ttl=254 time = 10 ms
  Reply from 192.168.1.2: bytes=56 Sequence=4 ttl=254 time = 3 ms
  Reply from 192.168.1.2: bytes=56 Sequence=5 ttl=254 time = 3 ms
```

```
--- 192.168.1.2 ping statistics ---
 5 packet(s) transmitted
 5 packet(s) received
 0.00% packet loss
 round-trip min/avg/max = 3/4/10 ms
```