向健民 2007-03-12 发表

Aolynk DR814路由器静态IP接入典型设置



	Na Rf	ime c1483 Parameter:	Value		
Quick Setup	Er	capsulation Mode:	LLC/SNAP	~	
🕨 WAN Setup	At	m Channel Paran	neter:		
LAN Setup	VE	VPI:			
Security	Ve		36]
Service	AT	M Traffic Class:	UBR 💌		
Device	Pe	ak Cell Rate:	3000]
Status	Bu	irst Tolerance:	0]
	Mi	nimum Cell Rate:	0		1
Save Config	M	ax Burst Size:	0		į –
NOTE:	Su	stainable Cell Rate	e: 0		í
REMEMBER TO SAVE CONFIG BEFORE	IP	Interface Parame	eter:		1
REBOOTING !!!	IP	Address:	22.20.20.20		
	M	ask	255.255.255.0)	
	M	ΓU:	1400		1
	тс	P MSS Clamp:	true 🗸		
			(Second		
項入IP地址/于	例	χwitu.			
	Min	mum Coll Pate:			
	Max	Burst Size			
Quick Setup	Max	Durst Size. 0			
• WAN Setup	Sus	tainable Cell Rate. 0			
LAN Setup	IP II IP A	ddress:	2 20 20 20		
Security	Mas	k (2	55 255 255 0		
Device	MTL	r. 👌	400		
Statuc	TCP	MSS Clamp:			
Status	Rip	Accept V1:	alse 🗸		
	Rip	Accept V2:	alse 🗸		
Save Config	Rip	Send V1:	alse 💙		
REMEMBER TO SAVE	Rip	Send V2:	alse 💙		
REBOOTING III	Rip	Send Multicast:	alse 🖌		
	Nat	Enabled: [t	rue 💙		
		nange Reset)		
网关设置。选	译Route set	up			
	WAN	DNS Relay DDNS			
Ouick Setun	WAN con	nections			
WAN Setup					
I AN Cotur	WAN services of	urrently defined:			
Convitu					
Service	Service	IP/Bridge Interface	Description	Creator	
Dovice	Presalle	Unattachod		Factory	-
Device	- hhosob	onattacileu	PPPoE WAN uplink	Defaults	Edito
Status		inuna	RFC1483 WAN	Factory	Edit o
Status	Rfc1483Up	ipwan	uplink	Defaults	
Status Save Config	Rtc1483Up	nice D	uplink	Defaults	
Status Save Config NOTE: REMEMBER TO SAVE	Rtc1483Up Create a new se	niceQ	uplink	Defaults	





四 配置关键点: 从ISP运营商处获得正确的VPI/VCI值、IP地址、子网掩码、网关地址、DNS地址,填 写到WEB管理页面中指示的地方。 设置完成后要选择Save Config保存设置,否则设置不会生效。