

### WA1208E如何设置无线访问工作模式(11b/11g/11a)

适用WA1208E版本: E1101版本

适用WA1208E型号: WA1208E-AG / WA1208E-AGP

1. 在射频卡1, 无线接口模式下

射频卡1为11a模式, 不需要设置工作模式, 只需要设置传输速率(rate-tx)

```
[H3C-Wireless-access1/1]rate-tx ?
6      6      Mbit/s
9      9      Mbit/s
12     12     Mbit/s
18     18     Mbit/s
24     24     Mbit/s
36     36     Mbit/s
48     48     Mbit/s
54     54     Mbit/s
auto   Automatic select transimt rate
```

2. 在射频卡2, 无线接口模式下:

射频卡2需要设置工作模式, 并可同时设置传输速率:

```
[H3C-Wireless-access2/1>wireless-mode ?
dot11b 1M,2M,5.5M,11M
dot11g 1M,2M,5.5M,11M,6M,9M,12M,18M,24M,36M,48M,54M
```

```
[H3C-Wireless-access2/1]rate-tx ?
1      1      Mbit/s
2      2      Mbit/s
5.5    5.5    Mbit/s
6      6      Mbit/s
9      9      Mbit/s
11     11     Mbit/s
12     12     Mbit/s
18     18     Mbit/s
24     24     Mbit/s
36     36     Mbit/s
48     48     Mbit/s
54     54     Mbit/s
auto   Automatic select transimt rate
```