

## 知 NE16E&08E&05产品Delete、 delete /unreseverd、 reset recycle-bin三者区别

吴进锋 2007-05-18 发表

### NE16E&08E&05产品Delete、 delete /unreseverd、 reset recycle-bin三者区别

在清理硬盘或者flash里面得文件时候，经常容易会把下面得三个命令混淆，下面就对三个命令详细说明一下：

1 Delete命令是删除所指定文件到回收站，通过undelete命令可以恢复；

```
<Quidway>delete flash:/paf.txt.bak
```

```
Delete flash:/paf.txt.bak?[Y/N]:y
```

```
%Deleting file flash:/paf.txt.bak.....Done!
```

```
<Quidway>undelete flash
```

```
Undelete flash:/paf.txt.bak?[Y/N]:y
```

```
%Undeleted file flash:/paf.txt.bak.
```

```
Undelete flash:/_vrpcfgbak.cfg?[Y/N]:n
```

2 Delete /unreserved是彻底删除所指定的文件，不进入回收站；

3 reset recycle-bin 是删除回收站里面的文件，清空回收站的所有文件。