



SecPath防火墙无法查看cpu利用率

胡俊 2007-05-29 发表

SecPath防火墙无法查看cpu利用率

SecPath防火墙在用户模式下，无法查看当前设备的cpu利用率：

```
[secpath]dis cpu-usage
```

CPU usage monitor is turned off now!Please turn on and try again

这个是由于关闭了防火墙的CPU查看开关所导致的，需要在隐藏模式下，打开设备CPU的查看开关：

```
[secpath]_
```

Now you enter a hidden command view for developer's testing, some commands may

affect operation by wrong use, please carefully use it with H3C engineer direction.

```
[secpath-hidecmd]set cpu-usage monitor
```