

# WA1208E与iNode客户端配合实现本地802.1x认证功能的典型配置

宋斌 2007-08-28 发表

## WA1208E与iNode客户端配合实现本地802.1x认证功能的典型配置

适用WA1208E版本: Comware Software, Version 3.10, Release 1102

适用WA1208E型号: WA1208E-G/ WA1208E-DG/ WA1208E-AG/ WA1208E-AGP/  
WA1208E-GP

适用iNode客户端版本: CH V2.40-R0312

### 一、组网需求

WA1208E、H3C POE交换机、便携机（安装有11b/g无线网卡）

### 二、组网图



WA1208E的IP地址为192.168.0.50。

使用的SSID的名称为*h3c-dot*。

用户名为111，密码为111。

### 三、WX交换机的典型配置

```
#  
sysname H3C  
#  
radius scheme system  
server-type extended  
primary authentication 127.0.0.1 1645  
primary accounting 127.0.0.1 1646  
user-name-format without-domain  
state primary authentication active  
state primary accounting active  
accounting  
  
domain system  
radius-scheme system  
access-limit disable  
state active  
idle-cut disable  
  
domain default enable system  
#  
local-server nas-ip 127.0.0.1 key h3c  
  
local-user 111  
password simple 111  
service-type lan-access  
  
local-user admin  
password simple wa1208  
service-type telnet level 3  
service-type web level 2  
#  
config-file-auto-save-period set 30  
cpu-performance-alarm-limit set 100  
config-file-auto-save-mode-open  
#
```

```
web-server max-user-number 5
web-server port 80
#
interface Aux0/0
#
vlan 1
#
interface Vlan-interface1
ip address 192.168.0.50 255.255.255.0 immediate
#
interface Ethernet0/1
#
ssid h3c-dot
dot1x
bind domain system
#
radio module 1
tx-power-level 1
channel 1
encryption wep 1 wep40 ascii 12345
encryption wep 2 wep104 ascii 123456789abcd
encryption wep 3 wep104 ascii abcd123456789
encryption wep 4 wep40 ascii 1208e
#
radio module 2
channel 11
encryption wep 1 wep40 ascii 12345
encryption wep 2 wep104 ascii 123456789abcd
encryption wep 3 wep104 ascii abcd123456789
encryption wep 4 wep40 ascii 1208e
#
interface Wireless-access1/1
bind ssid h3c-dot
access uplayer
#
interface Wireless-access1/2
#
interface Wireless-access1/3
#
interface Wireless-access1/4
#
interface Wireless-access2/1
#
interface Wireless-access2/2
#
interface Wireless-access2/3
#
interface Wireless-access2/4
#
interface Wds1/5
#
interface Wds1/6
#
interface Wds1/7
#
interface Wds1/8
#
interface Wds1/9
#
interface Wds1/10
#
interface Wds1/11
#
interface Wds1/12
```

```
#  
interface Wds1/13  
#  
interface Wds1/14  
#  
interface Wds1/15  
#  
interface Wds1/16  
#  
interface Wds1/17  
#  
interface Wds1/18  
#  
interface Wds1/19  
#  
interface Wds1/20  
#  
interface Wds2/5  
#  
interface Wds2/6  
#  
interface Wds2/7  
#  
interface Wds2/8  
#  
interface Wds2/9  
#  
interface Wds2/10  
#  
interface Wds2/11  
#  
interface Wds2/12  
#  
interface Wds2/13  
#  
interface Wds2/14  
#  
interface Wds2/15  
#  
interface Wds2/16  
#  
interface Wds2/17  
#  
interface Wds2/18  
#  
interface Wds2/19  
#  
interface Wds2/20  
#  
interface NULL0  
#  
user-interface aux 0  
user-interface vty 0 4  
authentication-mode scheme  
#  
return
```



#### 四、客户端的配置


- 1、在Windows无线客户端中选择连接SSID **h3c-dot**。



2、在iNode客户端中创建802.1x连接并进行认证。



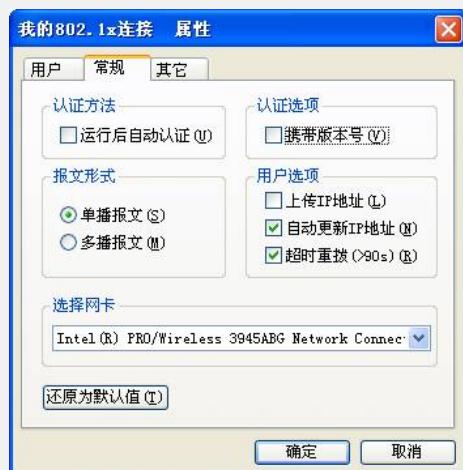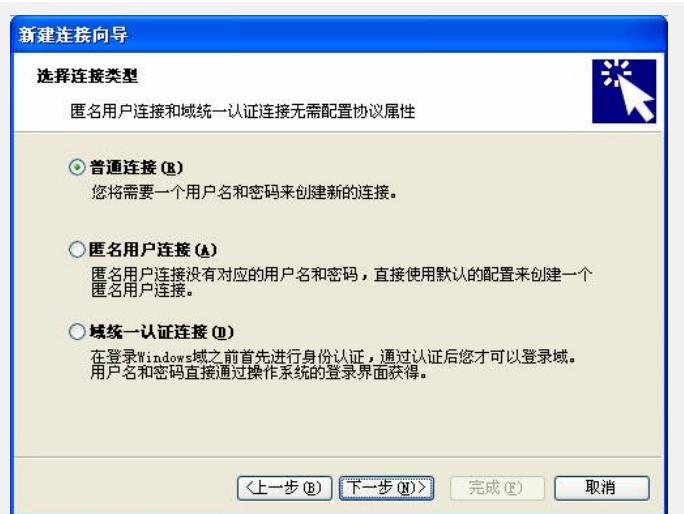

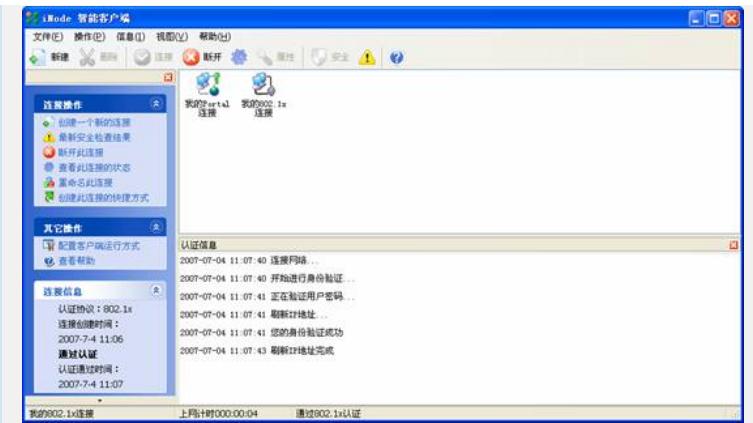

iNode客户端认证成功后，无线客户端可ping通WA1208E，如下图所示：

