

知 Typical Configuration Of NAT on AR28、AR46 Series Routers--Address Pool


沈杨豪 2007-09-13 发表

Typical Configuration Of NAT on AR28、AR46 Series Routers--Address Pool

[Requirements]

Users on the internal network access the Internet through NAT address pool translation of the router.

[Networking diagram]

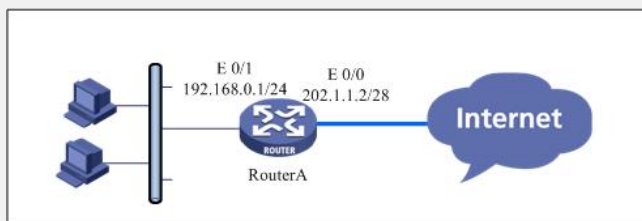

[Configuration script]

Configuration script

```
#
sysname RouterA
#
nat address-group 0 202.1.1.3 202.1.1.6 /NAT address pool of the user/
#
radius scheme system
#
domain system
#
acl number 2000 /Configure the internal network segment allowed for NAT translation/
rule 0 permit source 192.168.0.0 0.0.0.255
rule 1 deny
#
interface Ethernet0/0
ip address 202.1.1.2 255.255.255.248
nat outbound 2000 address-group 0 /Perform NAT translation on the egress interface/
#
interface Ethernet0/1
ip address 192.168.0.1 255.255.255.0 /Internal network gateway/
#
interface NULL0
#
ip route-static 0.0.0.0 0.0.0.0 202.1.1.1 preference 60 /Configure the default route/
#
user-interface con 0
user-interface vty 0 4
#
return
```