

How to View the Current Software Version

To upgrade software and locate fault, you need to figure out the current software version.

The command to view the current software version is: <H3C>**display version**

The output information is as follows:

```
<H3C>disp ver
Copyright Notice:
All rights reserved (Dec 10 2004).
Without the owner's prior written consent, no decompiling
nor reverse-engineering shall be allowed.
Huawei-3Com Versatile Routing Platform Software
VRP(R) software, Version 3.40, Release 0006           /Software version
number/
Copyright (c) 2003-2004 Hangzhou Huawei-3Com Tech. Co.,Ltd. All rights reserved.
Copyright (c) 2000-2003 Huawei Tech. Co.,Ltd. All rights reserved.
Quidway AR28-31 uptime is 0 week, 0 day, 0 hour, 28 minutes
/*****Equipment model           Running time           *****/
CPU type: PowerPC 8245 300MHz           /CPU type/
128M bytes SDRAM Memory                 /Memory capacity/
32M bytes Flash Memory                 /FLASH capacity/
128K bytes NvRAM Memory                 /NvRAM capacity/
Pcb   Version:1.0
Logic Version:1.0
BootROM Version:9.07                   /BootROM version number/
[SLOT 0] 2FE (Hardware)2.1, (Driver)2.0, (Cpld)0.0 /****Type of the card inse
rted on the router
[SLOT 1] 2SA (Hardware)1.1, (Driver)1.5, (Cpld)0.0   Version of the card
inserted on the router*****/
```

[Tip]

1. Be sure to provide the Release version number (Release 0006) after the version number (Version 3.40) in the version information!
2. You can execute the **vrbd** command to view the internal version number if necessary.