

知 Typical Configuration Of Maintaining by Remote Dialing Through the AUX Interface

冷志宇 2007-09-24 发表

Typical Configuration Of Maintaining by Remote Dialing Through the AUX Interface

[Requirements]

The AUX interface of the router is connected to the modem. The remote PC dials up to the router through the HyperTerminal for configuration (note that it is not for service but for remote maintenance).

[Networking diagram]



[Configuration script]

Configuration script

```
interface Aux0
  async mode flow      //asynchronous interface in the flow control mode
  link-protocol ppp
  #
  user-interface aux 0
  modem both          //Enable modem on the AUX interface
  #
```

[Tip]

For CMW3.4, you must enable modem dialing in the user-interface view.