



How to display CPU utility

冷志宇 2007-09-26 发表

Q: How to display CPU utility?

A:

VRP1.4 \VRP1.5

(router-config)#h-b cpu

VRP1.6

(router-config)#h-cpload

VRP 1.74-0010

display processes cpu

VRP1.74

display system cpu

VRP 1.74-0010

display proc cpu

VRP3.3

It is mandatory to enable the CPU utility detection switch in implicit mode for VRP3.3

_h Enter the implicit mode

set cpu-usage monitor Enable the CPU utility detection switch

disp cpu

eudemon100|

eudemon#show cpu

Current CPU occupancy rate:1%

Average CPU occupancy rate in the last 5 minutes:2%

eudemon#

eudemon200

Cannot be displayed for the moment