

知 Why does the automatic passbook entry machine fail to connect the front-end processor when the bank dumb terminal is accessed

冷志宇 2007-09-27 发表

Q: Why does the automatic passbook entry machine fail to connect the front-end processor when the bank dumb terminal is accessed?

A: The reason is that the automatic passbook entry machine cannot be automatically connected to the front-end processor after connecting with the asynchronous port, unlike the display terminal (monitor with a keyboard) that can trigger the interface connection by typing. Therefore, it is necessary to configure **tty auto-link** (time, 5s at the minimum) on the asynchronous port when connecting the passbook entry machine, making it automatically connect to the front-end processor.