



EC2004串口UBoot升级方法

张亮 2007-10-16 发表

EC2004串口UBoot升级方法

```
setenv ipaddr 192.168.0.13
```

```
setenv serverip 192.168.0.234
```

```
ping 192.168.0.234
```

```
//升级u-boot
```

```
bubt
```

```
//ulmage烧到FLASH:
```

```
erase 0xFE080000 0xFE5FFFFFF
```

```
tftp 0xFE080000 ulmage
```

```
//PROGRAM烧到FLASH:
```

```
erase 0xFE600000 0xFEFFFFFF
```

```
tftp 0xFE600000 program.img
```

```
//加载配置镜像:
```

```
erase 0xFEB00000 0xFECFFFFFF
```

```
tftp 0xFEB00000 config.img
```

```
//FLASH引导:
```

```
setenv bootcmd 'bootm 0xfe080000'
```

```
//保存环境变量:
```

```
saveenv
```

```
reset
```