

知 两台IV5000配置故障保护后发生failover的过程是怎样的

其它功能 魏勇 2008-03-12 发表

该案例适用于IV5000 V1R1版本。

以拔掉主IV5000（主机）电源为例说明如下：

备机和主机通过心跳通信失败 ->检测到心跳失败 ->备机接管 ->设置failover标志 (set-fm-loading-flag) ->拷贝存储配置库 (Successfully copied files from Quorum repository) ->等待主机回应接管请求 (Waiting for primary to acknowledge takeover request) ->主机无响应，备机强制接管 (Primary failed to acknowledge takeover request in time. Secondary will take over forcefully.) ->接管主机资源 ->添加主机服务IP ->备机接管成功。