

低端交换机启动时出现“No default unit”提示的含义和解决方法

一、 组网：

无

二、 问题描述：

交换机启动时，按Ctrl+B 显示如下内容。

```
Starting.....
*****
*                                     *
*      H3C E152 BOOTROM, Version 101      *
*                                     *
*****

Copyright(c) 2004-2007 Hangzhou H3C Technologies Co., Ltd.
Creation date   : Apr 11 2007, 17:51:47
CPU type       : BCM4704
CPU Clock Speed : 200MHz
BUS Clock Speed : 33MHz
Memory Size    : 64MB
Mac Address    : 000fe266be13

Press Ctrl-B to enter Boot Menu... 1

password: 8202a344: 8202a25c (8202a284, 174, 1000fc00, 8000000c)
8200ff64: 8203322c (eeeeeeee, eeeeeeee, eeeeeeee, eeeeeeee)
82033414: 8202a310 (eeeeeeee, eeeeeeee, eeeeeeee, eeeeeeee)
8202a344: 8202a25c (eeeeeeee, eeeeeeee, 820cc1d0, 820cc1f8)

$0 = 0 t0 = 6 s0 = 0 t8 = 0
at = 820b0000 t1 = 1000fc00 s1 = 1000fc00 t9 = 0
v0 = 0 t2 = 4 s2 = 174 k0 = eeeeeeee
v1 = 0 t3 = 0 s3 = 0 k1 = 0
a0 = 0 t4 = 0 s4 = 820cc1e8 gp = 820b0be0
a1 = 174 t5 = 0 s5 = 83f67b00 sp = 83f67740
a2 = 0 t6 = 0 s6 = 83f67900 s8 = 0
a3 = 0 t7 = 0 s7 = 83f67940 ra = 8202a34c
divlo = c8 divhi = 0 sr = 1000fc00 pc = 8202a284
```

三、 过程分析：

设备没有发现交换芯片。

四、 解决方法：

更换设备，返回研发进行分析。