



## H3C万兆核心路由器SR8800如何查看当前运行的版本和运行时间

孟维佳 2008-04-07 发表

可以使用命令display version查看系统当前运行的主机程序版本、Bootrom版本和设备运行时间:

```
<H3C>dis version
```

```
H3C Comware Platform Software
```

```
Comware Software, Version 5.20, Release 3121P01 ? 主机对外软件版本号
```

```
Copyright (c) 2004-2007 Hangzhou H3C Tech. Co., Ltd. All rights reserved.
```

```
H3C SR8800 uptime is 0 week, 0 day, 0 hour, 8 minutes ? 整机运行时间
```

```
SR02SRP1E3 0: uptime is 0 weeks,0 days,0 hours,8 minutes ? 主控板运行时间
```

```
H3C SR8800 with 1 MPC7447 Processor
```

```
1024M bytes SDRAM
```

```
65536K bytes Flash Memory
```

```
512K bytes NVRAM Memory
```

```
PCB Version : Ver.A
```

```
BootROM Version : 107 ? 主机BootROM软件版本号
```

```
CPLD Version : 001
```

```
MBUS CPLD Ver : 004
```

```
Software Version : SR8800-CMW520-R3121P01 ? 主机软件版本号
```

```
SPE-1010-E 5: uptime is 0 weeks,0 days,0 hours,7 minutes ? 业务板运行时间
```

```
H3C SR8800 NPU with 1 MPC8245 Processor
```

```
256M bytes SDRAM
```

```
0K bytes NVRAM Memory
```

```
PCB Version : Ver.A
```

```
BootROM Version : 106
```

```
CPLD Version : 001
```

```
MBUS CPLD Ver : 003
```

```
Software Version : SR8800-CMW520-R3121P01 ? 业务板软件版本号
```

```
CPUCard 1
```

```
PCB Ver : Ver.C
```

```
CPLD Ver : 001
```

```
SubCard 1
```

```
PCB Ver : Ver.A
```

```
CPLD Ver : 001
```