

The implement of dial-prefix and send-number in VE1/VT1

Q: what's the implement of dial-prefix and send-number in VE1/VT1?

A:

See the configuration as below.

```
#
entity 10002 pots
dial-prefix 013
line 7/1:15
match-template 01013.....
#
```

Call 01013123456789 to match the entity, if it doesn't configure send-number all and dial-prefix, which will send 123456789 to line 7/1:15. (".....") If add dia-prefix 013, it will send 013123456789(add 013 to prefix). By default, VE1/VT1 send number according to Truncate method. ("." represent for number) If you want to send all numbers, you should configure send-number all. User can configure freely according to need.