

1、 进入shell模式:

```
H3C>sy → 进入系统模式: sy
H3C] → 进入隐藏模式: _
H3C-hidden]_s → 进入shell模式: _s 回车 iware
H3C-hidden-expend]
```

2.

```
[H3C]_
[H3C-hidden]_st
[H3C-hidden-expend]fdisk /dev/hda
Command (m for help):d
Partition number (1-4): 3
```

```
Command (m for help):d
Partition number (1-4): 4
```

```
Command (m for help):w
The partition table has been altered!
```

Calling ioctl() to re-read partition table.

WARNING: Re-reading the partition table failed with error 16: Device or resource busy.
The kernel still uses the old table.
The new table will be used at the next reboot.
Syncing disks.

```
[H3C-hidden-expend]
[H3C-hidden-expend]reboot
INIT: Sending pSystem reboot...
```

System start booting...
Booting Normal Extend BootWare.....