**向健民** 2008-09-04 发表

Aolynk DR814 add reserved mapping for ip camera



3. Step by step configuration guide

**Step1** Find the security interface configuration page as below and Make sure NAT is enalbed.



Step2 Then click Advanced NAT configuration ... to enter the page as below



Step3 Click Add Reserved Mapping...to enter the page as below and fill in with ca mera address, Transport type and the port 80

juick Setup VAN Setup AN Setup	NAT Add Reserved Mapp Add Reserved Mapping	ning: ipwan	_				
security	IP Addresses	Transport	External Port Range		Internal Port Range		
Hervice	Global	Type	Start End		Start End		
Jevice itatus	0.0.0.0 (Set to 0.0.0.0 to use the primary /P address of the interface "privan")	192 168 0 10	tcp 💌	80	80	80	8þ

Step4 Click <Add Reserved Mapping>...to enter the page as below .

	Advanced NAT C	onfigura	tion: ip	wan					
sick Setup	Global Address B	ools							
AN Setup N Setup	No Global Address Pools								
scurity	Add Global Address Pool								
I BOAT BALL AND A REAL AND A									
evice	Reserved Mapping	15							
wice atus	Reserved Mapping	5	Reserve	d Mapping	\$				
avice atus sve Config	Reserved Mapping	5	Reserve Transport	d Mapping External I	s Port Range	Internal P	Port Range	1	
atus atus ive Config 6	Reserved Mapping	is Internal	Reserve Transport Type	d Mapping External I Start	s Port Range End	Internal F Start	Port Range End		
atus	Reserved Mapping	5	Reserve	d Mapping	s Port Rance	Internal F	Port Rappe	ï	

Step5 Add another mapping filled with camera address, Transport type and the port 4321

Setup etup	NAT Add Reserved Map	ping: ipwan					
top	Add Reserved Mapping		1				
<u></u>	IP Addresses		Transport	External Port Range		Internal Port Ran	
	Global	Internal	Type	Start	End	Start	Er
	0.0.0.0 (Set to 0.0.0.0 to use the primary IP address of the interface "pwan")	192 168 0 10	tcp 🖌	4321	4321	4321	4321

Step6 Click <Add Reserved Mapping> after the configuration is complete.



You must save your new settings in order to make it effective the next time powerd or There will be a delay while saving as configuration information is written to flash.

Copyright 2003

## 4. Note

OTE

Save Config

BER TO SAVE

IN step 1, the default LAN port of DR814 had modified to 192.168.0.1, you should u se 192.168.0.1 to enter the configuration page. And the camera address is 192.168.0.10, in other words, the default LAN port and the camera address you had set should in same net segment.