

知 Configure Console Login authentication

纪念宝 2008-10-15 发表

 
Configure Console Login authentication

Keywords: MSR ;Console

1. Requirements:

To log in through the Console interface, you shall enter the correct user name h3c and password h3c previously configured.

2. Network diagram:



3. Configuration steps:

Device and version: MSR series、version 5.20 and Beta 1106

RTA key configuration scripts

```
#  
//create local account and password  
local-user h3c  
password simple h3c  
//set service type as terminal  
service-type terminal  
//set priority to 3  
level 3  
#  
//set scheme authentication  
user-interface con 0  
authentication-mode scheme  
#
```