

## 知 The Number of Link-local address and Globe Single-cast address In MSR Series

张瑞 2008-10-16 发表

### The Number of Link-local address and Globe Single-cast address In MSR Series

**Keywords:** MSR; IPv6; Link-local address; Globe Single-cast address

**Q: When configuring IPv6, one link-local address and many globe single-cast can be configured(MSR is 10), But PC can has many link-local and global single-cast address, why? And how to use these address?**

A:

Many address that can be configured help user access to different address, Because normally there are more net provider, and they located in different address and provide different services. If we want to enjoy different service, PC and Router need configure many address to access different address. Router often use the first configured one. PC will use one of the address random.

Link-local address help PC access LAN, if PC communicate with outside, using global single-address.