



Authorization Number In MSR Series

Keywords: MSR;Authorization Number

Q: What is the difference of authorization number of Standard and Basic version in MSR Series? How to use it?

A:

MSR plat software has 2 types, that are standard and basic. The different between them is : Basic version only provide basic function of Router. Standard version not only support basic router function, but also provide Switch, Security, Voice etc. The authorization number of Basic need not register. Standard version need to register on router, after successful register, we can use the function such as Switch, Security, Voice etc.

The register command is :

```
<h3c>license register ***** (35 Bits authorization number)
```

After register, you can use command:

```
<H3C>display license
```

To check the result