

DynaPath能在安装的时候自动配置。默认情况下，路径故障切换和负载均衡都是被激活的。如果你想修改这些配置，可以使用dynacfg功能，输入dynacfg来获得可用选项。

items	comments
-l	列举所有的组，并显示PnP延时
-u	修改PnP延时
-s	显示路径状态
-u	激活或屏蔽负载均衡功能

1. 命令dynacfg -列举所有的组并显示几个选项。

```
C:\Program Files\DynaPath>dynacfg.exe -l
Dynampath version 5.01 build 921
Successfully opened \\.\dps
Successfully created event
Send SPD_GETALLID
Debug_Level is set to 0
PnP Delay is set to 1 seconds
Use Page 80 is set to 0
There are 2 groups
-----
    spd_id: 1
    spd_id: 2
Done.
在这个例子中，有2个组，关闭了调试功能，PnP延时是1，并且系统正使用Page 80。
```

1. 修改PnP延时

PnP延时是在NeoStor故障切换以后，恢复路径的时间间隔。推荐把这个延时设置为0。但是，有的驱动器要求这个延时为10。如果你使用Emulex适配器，那这个值就必须设置为10。

如果要为适配器修改PnP延时，在命令行下，输入命令：dynacfg -p delay。例如，要把这个延时改成10秒，就输入：dynacfg -p 10

```
C:\Program Files\DynaPath>dynacfg.exe -p 10
Dynampath version 5.01 build 921
Successfully opened \\.\dps
Successfully created event
Send SPD_SET_PNP_DELAY
Set PnP Delay to 10 seconds
Done.
```

3. 显示路径状态

在命令行，输入dynacfg -s spd_id
例如：dynacfg -s 1。出现如下界面。

```
C:\Program Files\DynaPath>dynacfg.exe -s 1
Dynampath version 5.01 build 921
Successfully opened \\.\dps
Successfully created event
spd_id is 1
Send SPD_GETPATHSTATE
Group: 1
-----
    npath: 2
    balance: 1
    retrydelay: 3000
    retrycount: 100
    fallback: 0
    exclude: 0
    primarygroup: 0
    type: 0
    StrID: 600D777002F1757459E7685AED9C
    Path Status:
```

```
-----  
Path00: State: PATH_GOOD  
Path00: OnController: Primary  
Path00: Commands Read: 6  
Path00: Commands Write: 0  
Path00: Bytes Read: 3072  
Path00: Bytes Write: 0  
Path01: State: PATH_GOOD  
Path01: OnController: Primary  
Path01: Commands Read: 0  
Path01: Commands Write: 0  
Path01: Bytes Read: 0  
Path01: Bytes Write: 0
```

Done.

在这个例子中，负载均衡被激活（1表示激活，0表示屏蔽），每条路径都工作正常。

4. 激活或屏蔽负载均衡

在命令行中，输入下面的命令来激活负载均衡。

```
dynacfg -u spd_id retrydelay retrycount loadbalance  
dynacfg -u 1 3000 100 1  
C:\Program Files\DynaPath>dynacfg.exe -u 1 3000 100 0  
Dynapath version 5.01 build 921  
Successfully opened \\.\dps  
Successfully created event  
spd_id is 1  
retrydelay is 3000  
retrycount is 100  
loadbalance is to be disabled  
Send SPD_SETCONF  
Successfully updated configuration  
Done.  
C:\Program Files\DynaPath>dynacfg.exe -u 1 3000 100 1  
Dynapath version 5.01 build 921  
Successfully opened \\.\dps  
Successfully created event  
spd_id is 1  
retrydelay is 3000  
retrycount is 100  
loadbalance is to be enabled  
Send SPD_SETCONF  
Successfully updated configuration  
Done.  
注意：  
虽然可以修改retrydelay和retrycount的值，但是不推荐这样做。
```