

### H3C S2000-EA端口隔离的典型配置


#### 一、组网需求:

小区用户PC2、PC3、PC4分别与交换机的以太网端口Ethernet1/0/2、Ethernet1/0/3、Ethernet1/0/4相连

交换机通过Ethernet1/0/1端口与外部网络相连

小区用户PC2、PC3和PC4之间两两不能互通

#### 二、组网图:

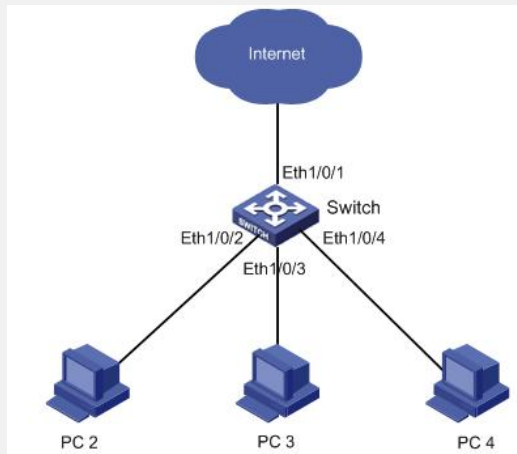

#### 三、配置步骤:

# 将以太网端口Ethernet1/0/2、Ethernet1/0/3、Ethernet1/0/4加入隔离组。

```
<Sysname> system-view
```

```
System View: return to User View with Ctrl+Z.
```

```
[Sysname] interface ethernet1/0/2
```

```
[Sysname-Ethernet1/0/2] port isolate
```

```
[Sysname-Ethernet1/0/2] quit
```

```
[Sysname] interface ethernet1/0/3
```

```
[Sysname-Ethernet1/0/3] port isolate
```

```
[Sysname-Ethernet1/0/3] quit
```

```
[Sysname] interface ethernet1/0/4
```

```
[Sysname-Ethernet1/0/4] port isolate
```

```
[Sysname-Ethernet1/0/4] quit
```

```
[Sysname] quit
```

# 显示隔离组中的端口信息。

```
<Sysname> display isolate port
```

```
Isolated port(s) on UNIT 1:
```

```
Ethernet1/0/2, Ethernet1/0/3, Ethernet1/0/4
```

#### 四、配置关键点:

无.