

Mhat's the system default sequence of voice entity and logical interface?

**纪合宝** 2009-01-14 发表

What's the system default sequence of voice entity and logical interface? Q: What's the system default sequence of voice entity and logical interface? C an it be configured?

A:

The default sequence is from low to high. If E1 interface has 30 B channels, the first choice is 0, and the second choice is 1, you can configure using "isdn bch-select-way