

知 MSR configuration difference between “^1、^1..” and “^1..\$”

纪合宝 2009-01-14 发表

MSR configuration difference between “^1、^1..” and “^1..\$”

Q: What's the difference between “^1、^1..” and “^1..\$” of MSR configuration?

A:

^1 starts with 1, don't exceed 31 digits, such as 1、 123、 123456 and so on

^1.. starts with 1, the least length is 3 and don't exceed 31 digits, such as
123, 1234 and so on

^1..\$ starts with 1 and the length must be 3, such as 123、 111、 132 and so on