



NTE outbound mode

纪合宝 2009-01-14 发表

NTE outbound mode

Q: What's NTE outbound mode?

A:

VoIP inbound mode put DTMF code into normal RTP, and mixed together with sound signal. NTE outbound mode open a special NTE filed in FRP to take DTMF code.