





```
|Note:the operating device is cfa0          |
|<1> Display All File(s)                    |
|<2> Set Application File type              |
|<3> Set Configuration File type          |
|<4> Delete File                           |
|<0> Exit To Main Menu                     |
```

=====  
Enter your choice(0-4): 1

Display all file(s) in cfa0:

'M' = MAIN 'B' = BACKUP 'S' = SECURE 'N/A' = NOT ASSIGNED

```
=====  
|NO. Size(B) Time          Type Name          |
|1 30364752 Oct/27/2008 18:50:56 M   cfa0:/secpath1000s-imw110~001 |
|2 787456   Oct/26/2008 05:03:58 N/A  cfa0:/upgrade_package/pack~002 |
|3 2106128  Oct/26/2008 04:02:14 N/A  cfa0:/upgrade_package/av/p~003 |
|4 1998384  Jul/26/2008 01:05:06 N/A  cfa0:/upgrade_package/av/p~004 |
|5 907456   Jul/30/2008 04:03:52 N/A  cfa0:/upgrade_package/pack~005 |
```

=====<File CONTROL>=====

```
|Note:the operating device is cfa0          |
|<1> Display All File(s)                    |
|<2> Set Application File type              |
|<3> Set Configuration File type          |
|<4> Delete File                           |
|<0> Exit To Main Menu                     |
```

=====  
Enter your choice(0-4): 0

=====<EXTEND-BOOTWARE MENU>=====

```
===
|<1> Boot System                            |
|<2> Enter Serial SubMenu                  |
|<3> Enter Ethernet SubMenu               |
|<4> File Control                          |
|<5> Modify BootWare Password             |
|<6> Skip Current System Configuration    |
|<7> BootWare Operation Menu              |
|<8> Clear Super Password                 |
|<9> Storage Device Operation             |
|<0> Reboot                               |
```

=====  
Enter your choice(0-9): 3

=====<Enter Ethernet SubMenu>=====

```
|Note:the operating device is cfa0          |
|<1> Download Application Program To SDRAM And Run          |
|<2> Update Main Application File                    |
|<3> Update Backup Application File                |
|<4> Update Secure Application File                |
|<5> Modify Ethernet Parameter                    |
|<0> Exit To Main Menu                            |
|<Ensure The Parameter Be Modified Before Downloading!>    |
```

=====  
Enter your choice(0-5): 1

```
Loading.....
.....
.....
.....
.....
.....
.....
.....
.....
.....Done!
```



Starting cdevnod: [ OK ]  
Starting cfginit: [ OK ]  
Starting port: [ OK ]  
Starting portinit: [ OK ]  
Starting seg: [ OK ]  
Starting session: [ OK ]  
Starting synfld: [ OK ]  
Starting nass: [ OK ]  
Starting uaae: [ OK ]  
Starting usern: [ OK ]  
Starting blist: [ OK ]  
Starting sied: [ OK ]  
Starting netstream: [ OK ]  
Starting msp: [ OK ]  
Starting ddos: [ OK ]  
Starting sarc: [ OK ]  
Starting ucif: [ OK ]  
Starting ucif upgrade: [ OK ]  
Starting plug: [ OK ]  
Starting sarc\_export: [ OK ]  
Starting drv\_after\_data:  
[ OK ]  
Starting useridt: [ OK ]  
Starting ifmd: [ OK ]  
Starting route: [ OK ]  
Starting ifsynd: [ OK ]  
Starting datalogd: [ OK ]  
Starting timer: [ OK ]  
Starting devmd: [ OK ]  
Starting snmpd: [ OK ]  
Starting maild: [ OK ]  
Starting l2fbd: [ OK ]  
Starting httpd: [ OK ]  
Starting acseic-daemon: [ OK ]  
Starting rifmond: [ OK ]  
Starting acfpclientd: [ OK ]  
Starting ptrace\_daemon: [ OK ]  
Starting paf\_init\_aaa: [ OK ]  
Starting session\_go: [ OK ]  
Starting led: [ OK ]  
Starting monit: [ OK ]  
Starting layer1close: [ OK ]  
Starting aaa\_daemon: aaa was disabled, exit...  
[ OK ]  
Starting ramdb2disk: [ OK ]  
Starting drv\_system\_up: [ OK ]  
Starting vtysh:

Hello, this is H3C SecPath T1000-S's console.

Password:

Password:

Password:

<H3C>dis ver

H3C i-Ware Platform Software

i-Ware software, Version 1.00, Beta 1213P02

Signature base, Version IPS 1.2.13, AV\_SS 1.1.12

Copyright (c) 2004-2008 Hangzhou H3C Technology Co., Ltd. All rights reserved.

Without the owner's prior written consent, no decompiling nor reverse-engineering shall be allowed.

SecPath T1000-S Uptime is 0 week(s), 0 day(s), 00 hour(s), 03 minute(s)

CPU type: RMI XLR716

Flash Memory: 4M bytes

CF card Memory: 999M bytes

Pcb Version:Ver.A

CPLD Version:2.0

BASIC BOOTWARE Version:1.03

EXTEND BOOTWARE Version:1.03

[SLOT 0] 2MGE+4GE (hardware)Ver.A, (Driver)NONE, (Cpld)2.0

[SLOT 1] GX4C (hardware)Ver.A, (Driver)NONE, (Cpld)NONE

<H3C>sy

<H3C>system-view

[H3C]

[H3C]