堆叠 IRF2 夏威 2019-11-24 发表

S5820V2_5830V2交换机IRF2堆叠后如何升级?

解决方法

问题描述

1. 升级前的准备工作

I准备好升级所需的软件版本文件S5820V2_5830V2-CMW710-R2208P01.ipe;

I通过ftp或tftp将版本文件上传到slot1和slot2的flash:/目录下;

1.1. 先升级Master设备,再升级Slave步骤

步骤	工作内容	
1	先删除配置中关于mad检测的配置 [ASW-T06-I03.CM3]interface Bridge-Aggregation 100 [ASW-T06-I03.CM3-Bridge-Aggregation100]undo mad enable	
2	将slot 1设备中的所有业务端口shutdown,并保存配置 [ASW-T06-I03.CM3]interface range Ten-GigabitEthernet 1/0/1 to Ten-GigabitEth ernet 1/0/48 [ASW-T06-I03.CM3-sif-range]shutdown <asw-t06-i03.cm3-save The current configuration will be written to the device. Are you sure? [Y/N]:y Please input the file name(*.cfg)[flash:/config.cfg] (To leave the existing filename unchanged, press the enter key): flash:/config.cfg exists, overwrite? [Y/N]:y Validating file. Please wait Saved the current configuration to mainboard device successfully. Slot 2: Save next configuration file successfully.</asw-t06-i03.cm3-save 	
3	指定boot-loader,重启升级slot1设备到R2208P01版本;重启完slot1后立即通过 Slot2的Console口,在Slot2设备上shutdown所有IRF端口。 <asw-t06-i03.cm3>boot-loader file flash:/S5820V2_5830V2-CMW710-R2208P 01.ipe slot1 main <asw-t06-i03.cm3>reboot slot1 Start to check configuration with next startup configuration file, please waitDONE! This command will reboot the specified slot, Continue? [Y/N]:y Now rebooting, please wait %Jan 3 04:00:55:522 2011 ASW-T06-I03.CM3 DEV/5/BOARD_REBOOT: Board is rebooting on Slot 1. <asw-t06-i03.cm3>sys [ASW-T06-I03.CM3] interface range FortyGigE 2/0/49 to FortyGigE 2/0/52 [ASW-T06-I03.CM3-if-range]shutdown 注意: 1、此处千万别reboot错了槽位号, slot 1! 切记切记! 需通过console连接到Slot 2上, shutdown IRF端口,该操作要求快速, reboot 后立即执行。</asw-t06-i03.cm3></asw-t06-i03.cm3></asw-t06-i03.cm3>	
4	Console连接到Slot 1设备上,将升级完成后的Slot 1设备中的业务端口全部undo shutdown打开。 [ASW-T06-I03.CM3]interface range Ten-GigabitEthernet 1/0/1 to Ten-GigabitEth erne t 1/0/48 [ASW-T06-I03.CM3-if-range]undo shutdown 注意: 此处切勿保存配置!	
5	Console连接到Slot 2设备上,指定启动文件为R2208P01,重启slot 2升级版本; <asw-t06-i03.cm3>boot-loader file flash:/S5820V2_5830V2-CMW710-R2208P 01.ipe slot 2 main <asw-t06-i03.cm3>reboot slot 2 Start to check configuration with next startup configuration file, please wait DONE! Current configuration may be lost after the reboot, save current configuration? [Y/ N]:N This command will reboot the specified slot, Continue? [Y/N]:Y 注意: 此处弹出是否保存配置时,务必选择N</asw-t06-i03.cm3></asw-t06-i03.cm3>	
6	查看堆叠是否成功,聚合组状态是否正常,配置是否完整	
7	恢复之前删除的mad检测的配置,并保存配置。 [ASW-T06-I03.CM3]interface Bridge-Aggregation 100 [ASW-T06-I03.CM3-Bridge-Aggregation100] mad enable	
1、 升级		

2、 升级过程中, 除第2、7步, 其他步骤都不需要保存配置;

3、升级的中间状态,两台设备版本不一致,业务端口全部打开时,由于IRF分裂后桥MAC地址是一致的,所以LACP邻居与这两台S58V2相连时无法区分位两台设备,端口状态都会置为Select状态;

4、 升级到R2208P01后再打上补丁版本S5820V2_5830V2-CMW710-R2208P01H03。