🗩 S9500E的console口密码恢复

console 夏威 2019-11-24 发表

S9500E的console口如何恢复密码?

解决方法 DDR2 SDRAM test successful. System is starting... Booting Normal Extend BootWare The Extend BootWare is self-decompressing...... Done!

* * * * H3C S9500E BootWare, Version 1.11 * * *

Copyright (c) 2004-2010 Hangzhou H3C Technologies Co., Ltd.

 Compiled Date
 : Aug 9 2010

 CPU Type
 : MPC8548E

 CPU L1 Cache
 : 32KB

 CPU L2 Cache
 : 512KB

 CPU Clock Speed
 : 1000MHz

 Memory Type
 : DDR2 SDRAM

 Memory Size
 : 400MHz

 BootWare Size
 : 4MB

 Flash Size
 : 1024KB

 SNVRAM Size
 : 1024KB

 BASIC CPLD V=rsion : 002

 EXTEND CPLD V=rsion : 002

 PCB Version
 : Ver.B

Board self testing	
Board steady testing	[PASS]
Board SlotNo	[0]
Subcard exist testing	[PASS]
DX246 testing	[PASS]
PHY88E1111 testing	[PASS]
CPLD1 testing	[PASS]
CPLD2 testing	[PASS]
NS16550 register testing	[PASS]
The switch's Mac address	[00:23:89:41:D4:00]
CF Card testing	[PASS]
BootWare Validating	
Press Ctrl+B to enter extended boo	t menu
Please input BootWare password:	

Note: The current operating device is flash Enter < Storage Device Operation > to select device.

1
ıbMenu
SubMenu
are Password
are Password

<6> BootWare Operation Menu		
<7> Clear Super Password		
<pre> <8> Storage Device Operation</pre>		
<9> Product Special Operation		
<pre>l<0> Reboot</pre>		
Enter your choice(0-9): 9		
<1> Modify Chassis ID Operation		
<2> Modify Working Mode		
<3> Modify PCL Key		
<4> Skip Current System Conliguration		
Enter your choice(0-4): 4 Flag Set Success.		
=		
<1> Modify Working Mode		
4- Skin Current System Configuration		
<0> Exit To Main Menu		
Enter your choice(0-4): 0		
======================================		
<pre> <1> Boot System </pre>		
<2> Enter Serial SubMenu		
<3> Enter Ethernet SubMenu		
<4> File Control		
<5> Modify Bootware Password		
<6> Bootware Operation Menu		
<pre></pre>		
<0> Storage Device Operation		
Enter your choice(0-9): 1 //这个地方一定选1,别选0,否则之前的配置不生效 Starting to get the main application fileflash:/S9500E-CMW520-R1238P08.bin		
The main application file is self-decompressing		

..... Done! System application is starting... Starting application at 0x00010000 ... Configuration file is skipped. User interface con0 is available.

.....

Press ENTER to get started. <H3C>