


组网及说明


StoreVirtual 3200 iSCSI , LHOS 13.5

配置步骤


1. 主机端不进行iSCSI目标发现，存储端手动输入主机iqn。
WSS2012R2主机端iSCSI发起程序中不添加存储端存储池VIP。

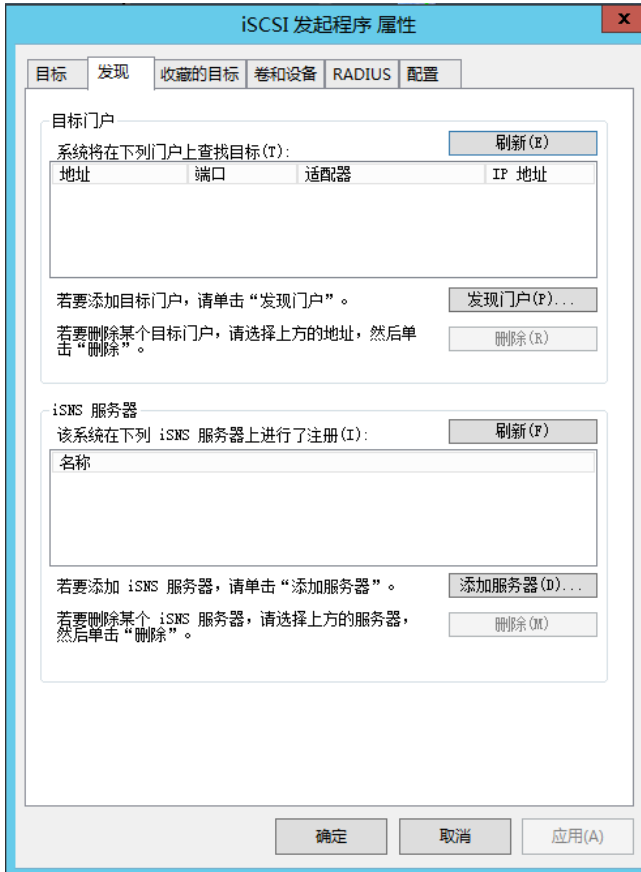


相应地，存储目标不可见。

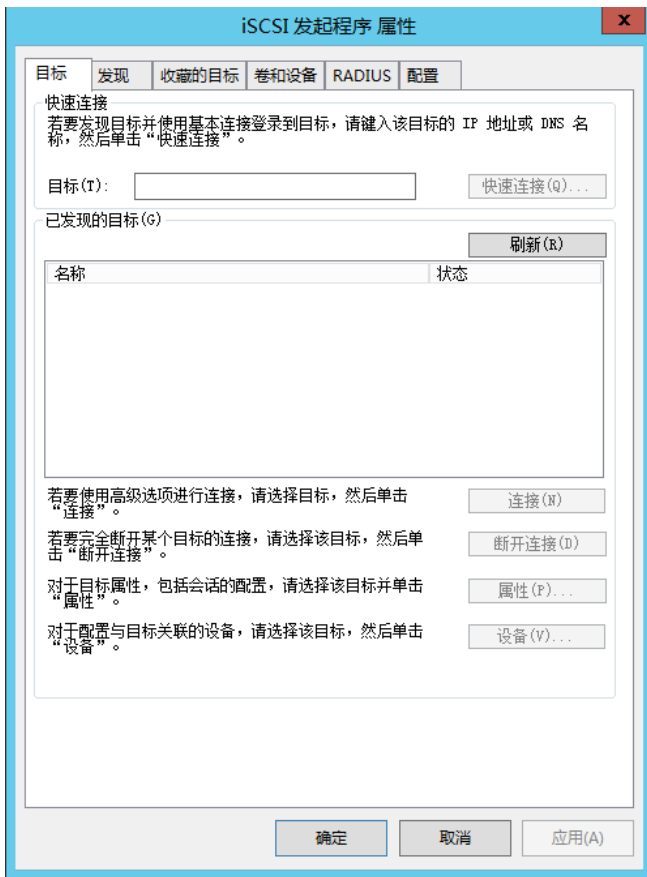


存储端新建服务器，默认为手动配置initiator。

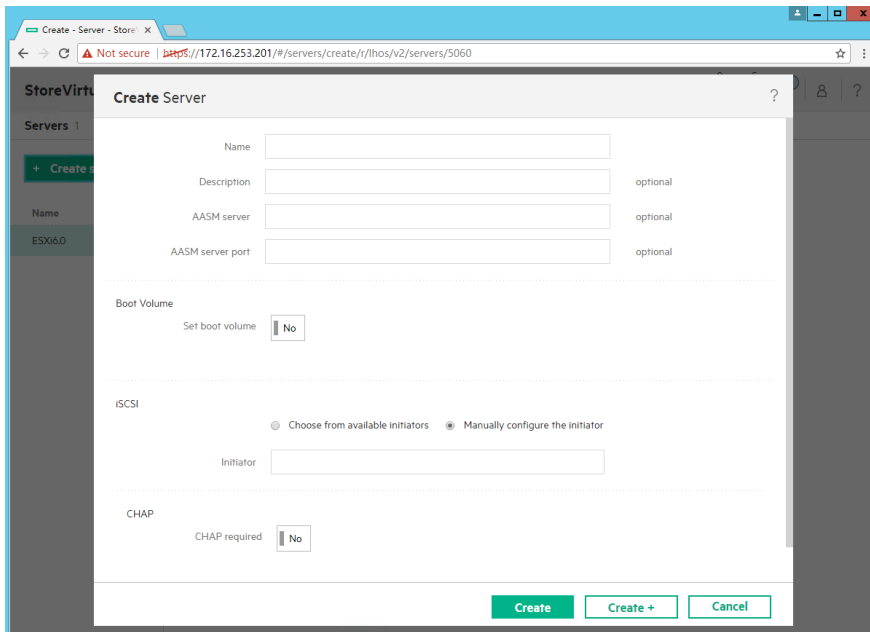


点选从可用initiator中选择，点击select。

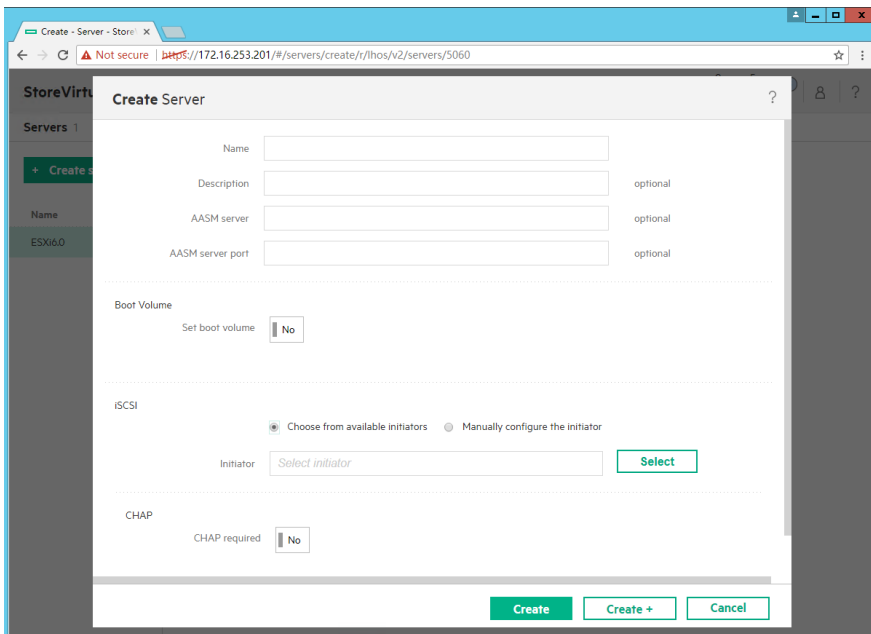


则提示无可用initiator。

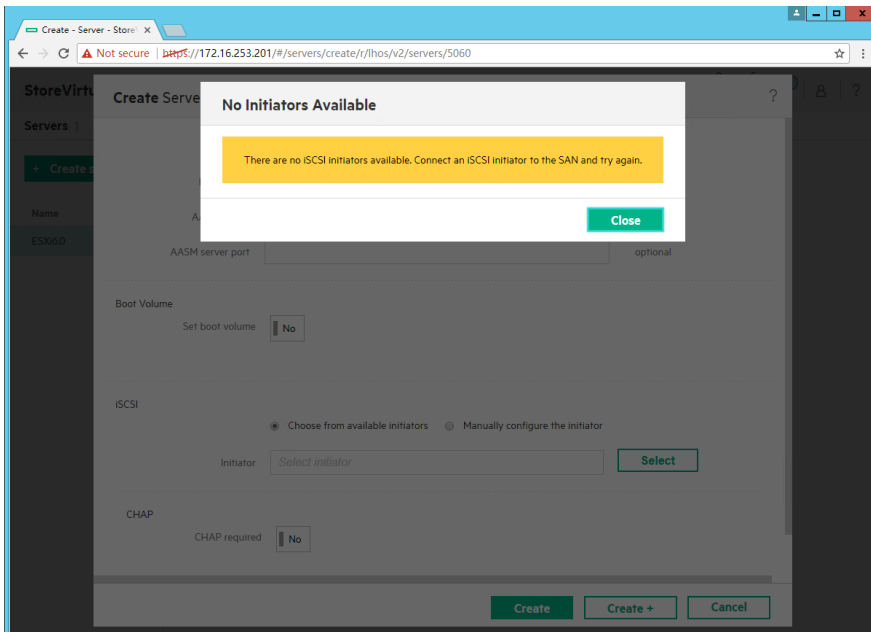


需要在主机端iSCSI发起程序中复制IQN。

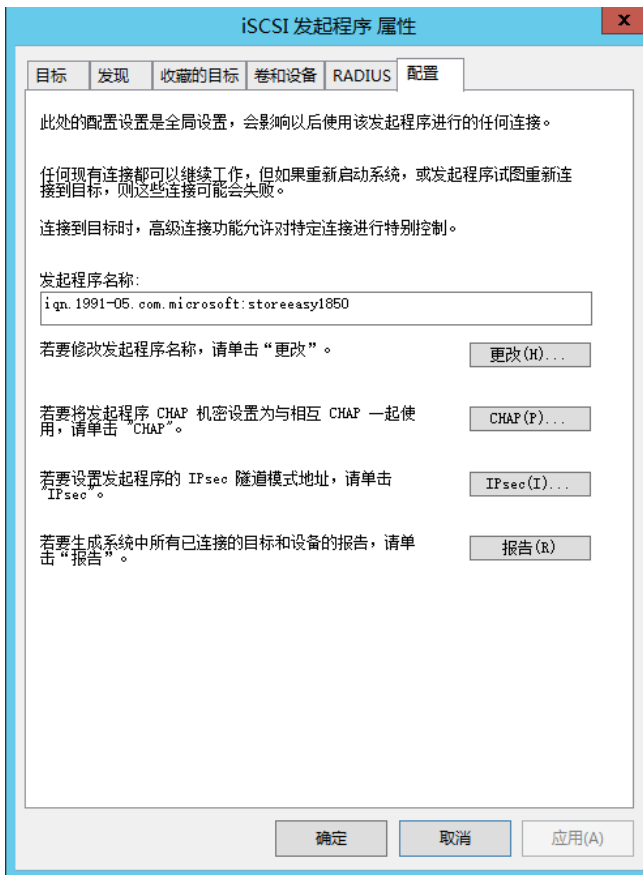


存储端点选手动配置initiator，粘贴IQN信息，点击Create，创建服务器。

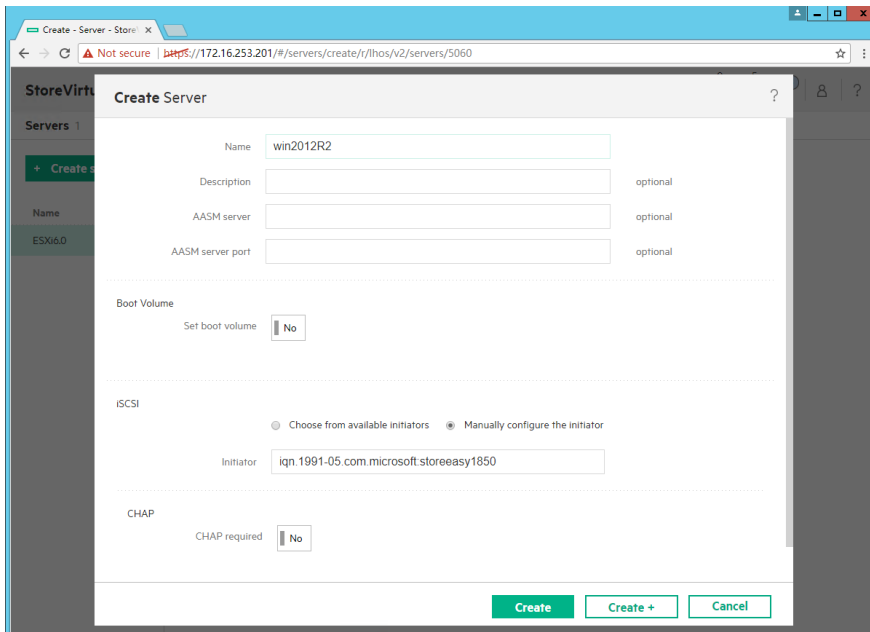


服务器创建完成。

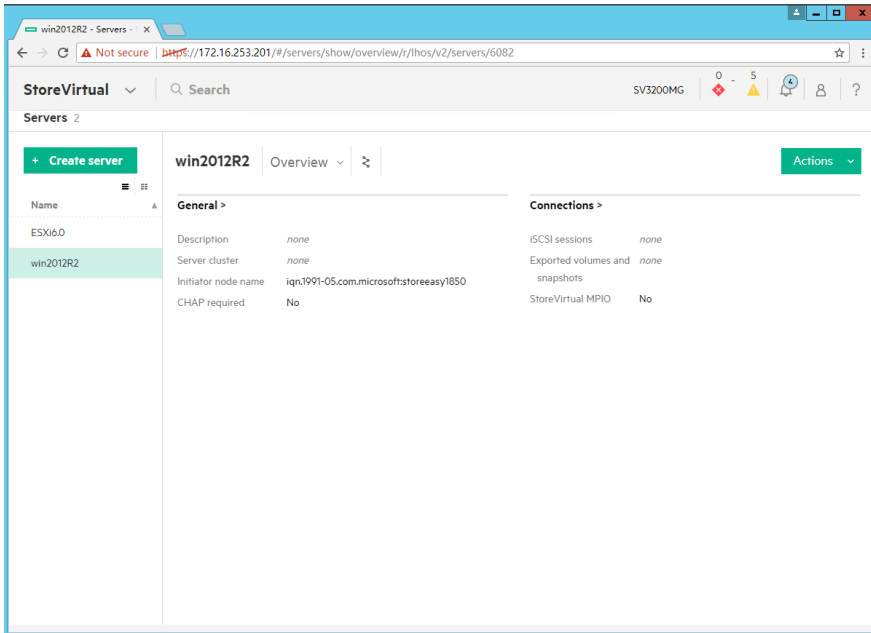


2. 主机端先进行iSCSI目标发现并连接存储目标，存储端可自动发现主机iqn。
WSS2012R2主机端iSCSI发起程序中添加存储端存储池VIP。

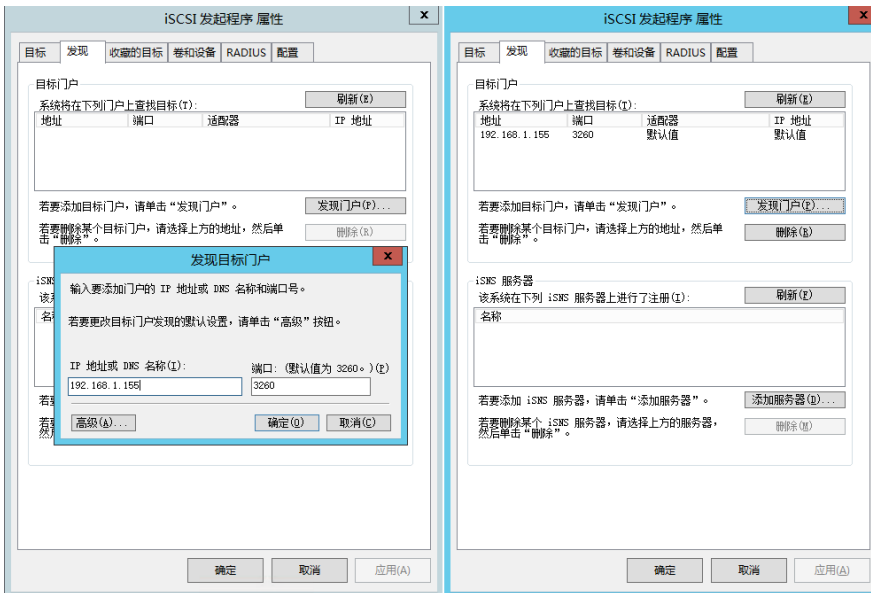


相应地，可见存储目标(MLPT)，点击连接。

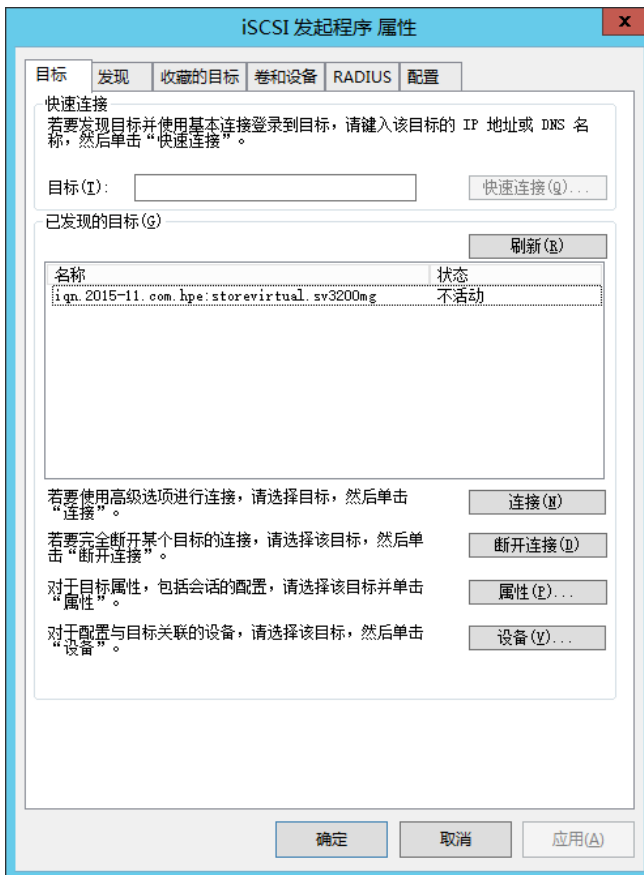


存储目标已连接。

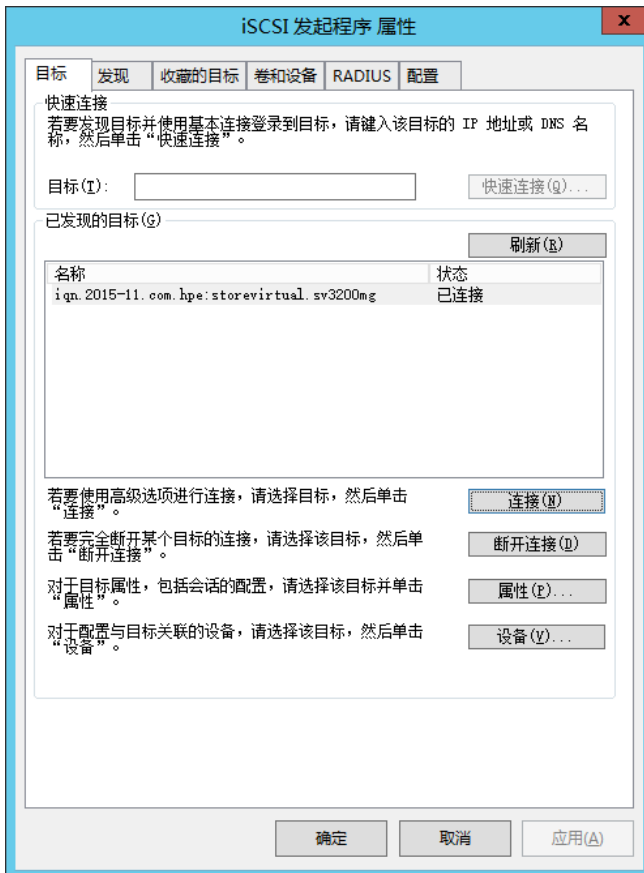


存储端新建服务器，点选从可用initiator中选择，点击select。

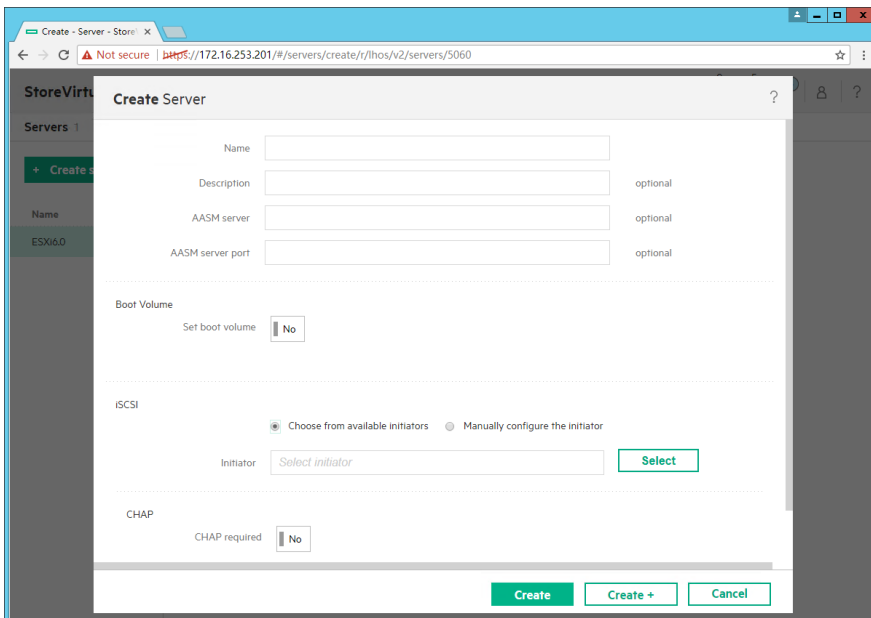

此时，主机端与存储端已建立iSCSI会话连接，故存储端可自动识别主机端的IQN信息，选择后点击Select。

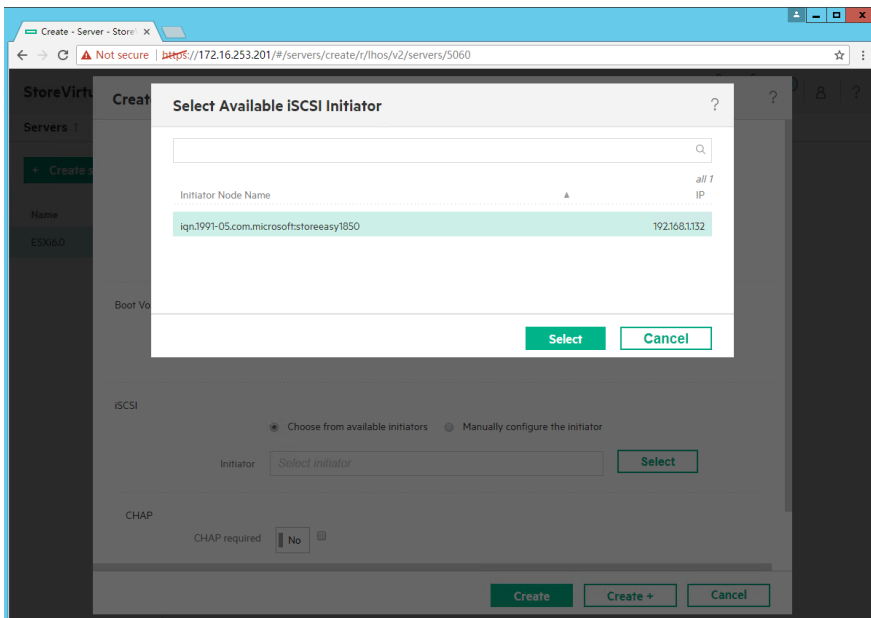

点击Create，创建服务器。

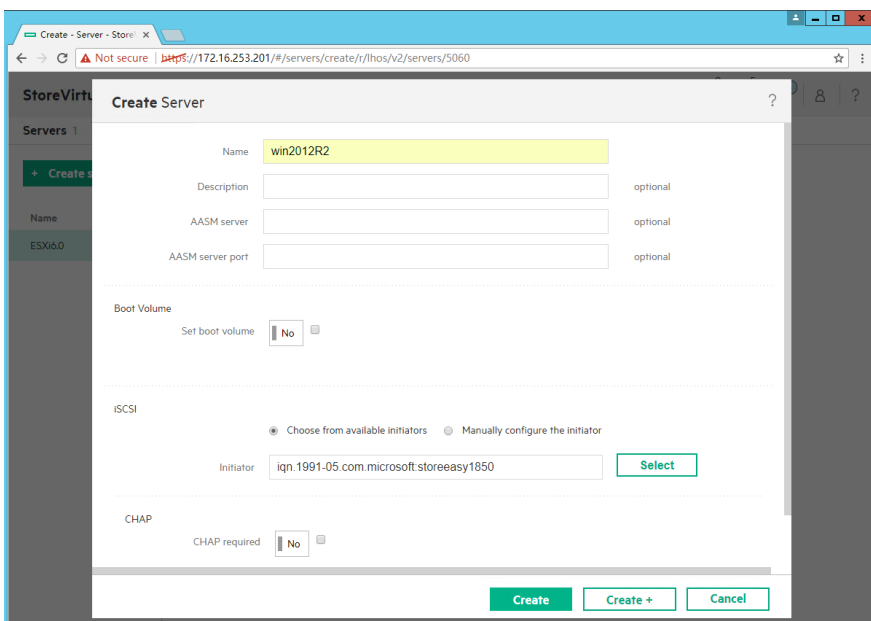

服务器创建完成。

The screenshot displays the StoreVirtual web management interface. The browser address bar shows the URL: <https://172.16.253.201/#/servers/show/overview/f/hosts/v2/servers/6084>. The page title is "StoreVirtual" and the user is logged in as "SV3200MG".

The main content area is titled "Servers 2" and features a "Create server" button. A list of servers is shown on the left, with "win2012R2" selected. The details for "win2012R2" are displayed in the main panel, including a "General" tab and a "Connections" tab.

General >		Connections >	
Description	none	iSCSI sessions	1
Server cluster	none	Exported volumes and snapshots	none
Initiator node name	iqn.1991-05.com.microsoft:storeeasy1850	StoreVirtual MPIO	No
CHAP required	No		

配置关键点