

HPE Gen10 Plus/Gen10 服务器 iLO 5 中升级 iLO 固件

目录

一. 适用范围与注意事项.....	1
二. 升级准备.....	1
1. 固件获取.....	1
2. 连接 iLO	1
三. 升级步骤.....	1

一. 适用范围与注意事项


- 本文档旨在说明 HPE Gen10 Plus/Gen10 系列服务器通过 iLO 5 界面升级 iLO 固件方法。
- 实际情况是否适用本文档，请通过下面导航链接进行确认：
<https://zhiliao.h3c.com/Theme/details/218273>
- 提示：
 - 本文档中的信息（包括产品，软件版本和设置参数）仅作参考示例，具体操作与目标需求设置请以实际为准。
 - 固件更新有风险，请注意提前备份数据。
 - 本文档不定期更新维护，请以发布的最新版本为准。

二. 升级准备

1. 固件获取
具体方法请参考：<https://zhiliao.h3c.com/Theme/details/216386>
2. 连接 iLO
具体方法请参考：<https://zhiliao.h3c.com/Theme/details/216337>

三. 升级步骤

1. 访问 iLO 5
浏览器输入 iLO 5 IP 地址访问 iLO，输入用户名和密码登录。

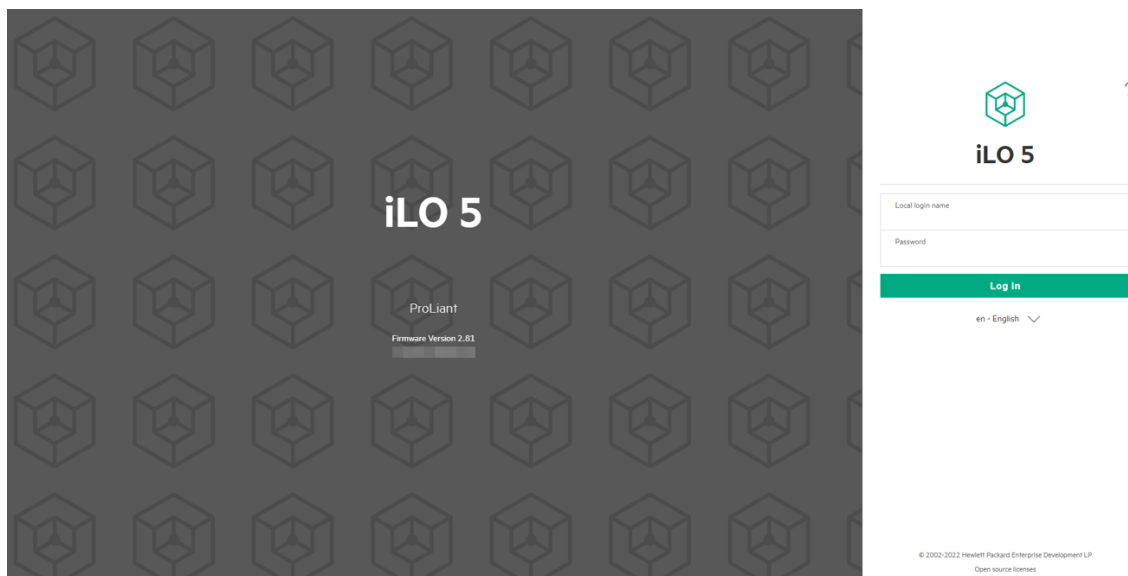

2. 通过 iLO 检查固件更新前的版本

通过 iLO 5 页面 Firmware & OS Software - Installed Firmware 查看 iLO 5 的固件版本。


Firmware Name	Firmware Version	Location
900GB 12G SAS HDD	HPD9	Slot=0:Port=1:Box=1:Bay=1
900GB 12G SAS HDD	HPD9	Slot=0:Port=1:Box=1:Bay=2
900GB 12G SAS HDD	HPD9	Slot=0:Port=1:Box=1:Bay=3
900GB 12G SAS HDD	HPD9	Slot=0:Port=1:Box=1:Bay=4
Embedded Video Controller	2.5	Embedded Device
HPE Ethernet 1Gb 4-port 331i Adapter - NIC	20.24.41	Embedded LOM
HPE Smart Array P408i-a SR Gen10	5.61	Embedded RAID
HPE Smart Storage Energy Pack 1 Firmware	2.1	Embedded Device
HPE SN1600G 12Gb 7.6 EC HBA	2.00.01	PCI-E Slot 1
iLO 5	2.81 Mar 07 2023	System Board
Innovation Engine (IE) Firmware	0.2.2.2	System Board
Intelligent Platform Abstraction Data	16.5.0 Build 24	System Board
Intelligent Provisioning	3.81.2	System Board
Language Pack	2.72.05	Simplified Chinese Language Pack
Power Management Controller Firmware	1.0.8	System Board
Power Management Controller FW Bootloader	1.1	System Board
Power Supply Firmware	1.00	Bay 2
Redundant System ROM	U32 v2.76 (02/09/2023)	System Board
Server Platform Services (SPS) Descriptor	1.2 0	System Board
Server Platform Services (SPS) Firmware	4.1.4.901	System Board
System Programmable Logic Device	0x2E	System Board
System ROM	U32 v2.78 (03/16/2023)	System Board

注：其他固件信息也可在此页面查询。

3. 固件更新


3.1 下载与解压固件

- 1) 通过 [HPE 官网](#) 搜索对应服务器的 iLO 固件，可选择任意 Windows 系统，下载 exe 固件文件。

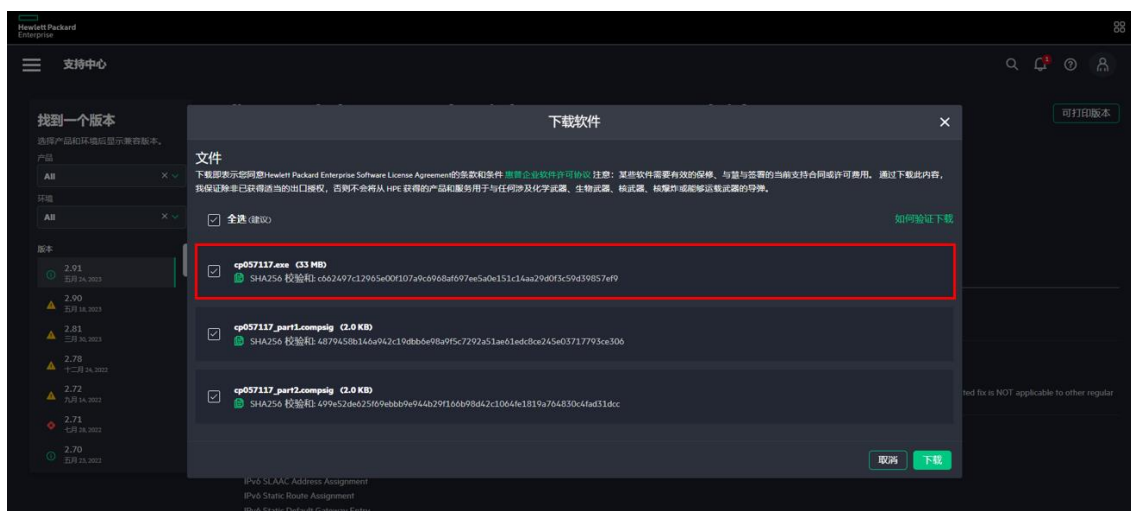


注：如现网运行 iLO 5 固件版本为 2.xx，下载 iLO 固件可直接选择操作环境类型为 OS Independent 的 ilox_xxx.fwpkg 文件，使用方法与本文介绍获取 exe 中的 xxx.bin 一致。

2) 将 exe 文件解压缩，获取 xxx.bin 文件。

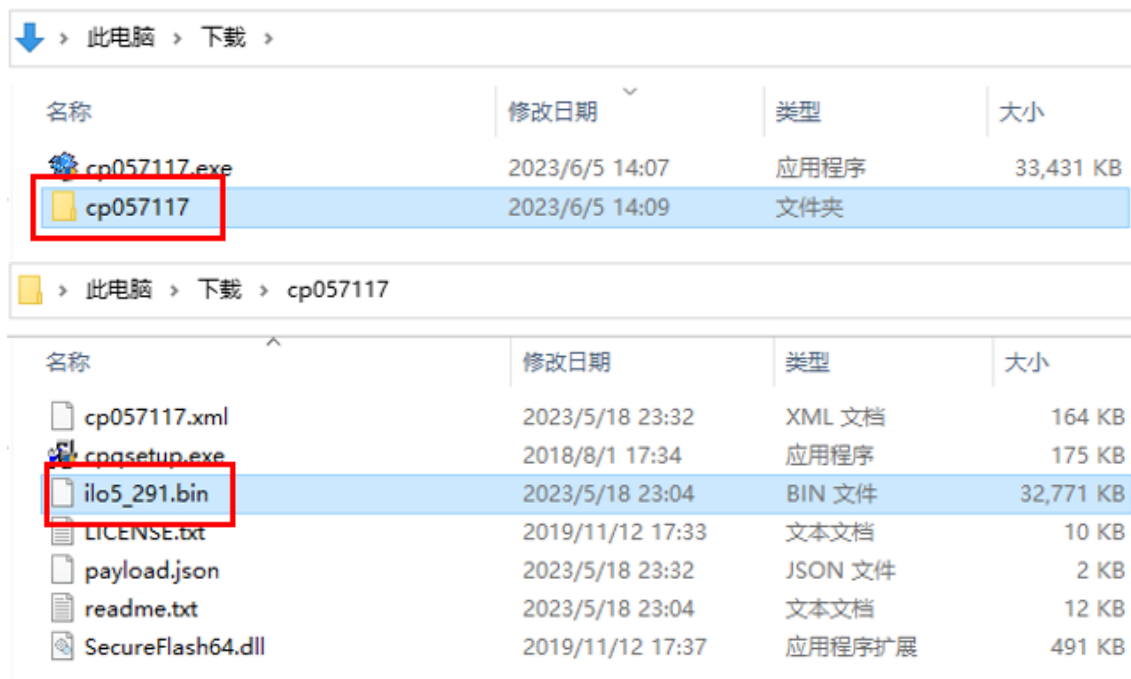


3.2 将固件挂载到 iLO 并开始更新


1) 通过浏览器登录 iLO 5，在 Firmware & OS Software 页面选择 **Update Firmware**。

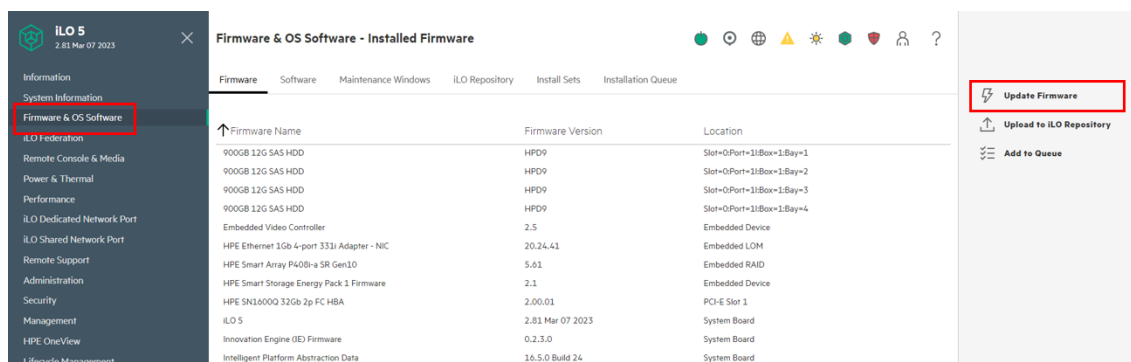

2) 选择 **Local file**，将已保存至本地的固件文件挂载到**选择文件**处。

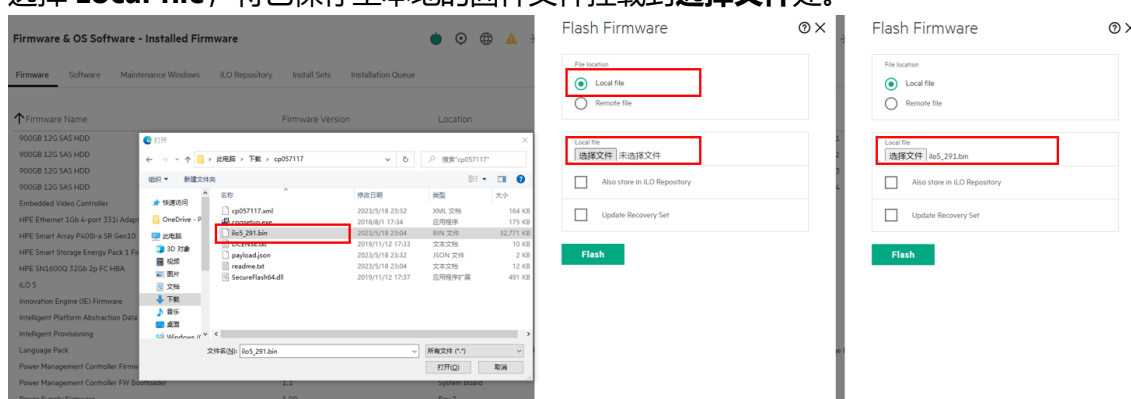


3) 点击 **Flash**，阅读更新提示，确认无误后点击 **OK** 即开始上载与更新固件。

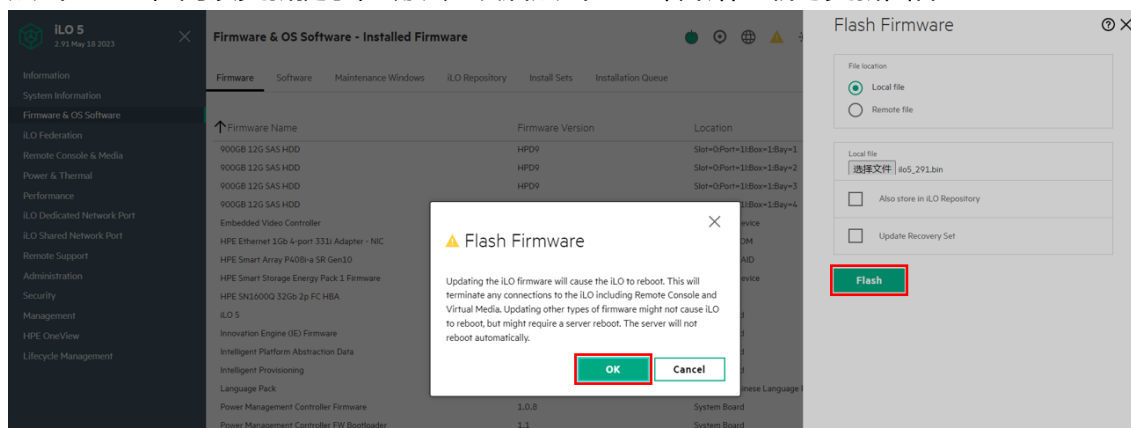


注：上图提示内容为“如果更新 iLO 固件，将导致 iLO 重新引导。这会中止到 iLO 的任何连接，包括远程控制台和虚拟介质。更新其它类型的固件可能不会导致 iLO 重新引导，但可能需要重新引导服务器。服务器不会自动重新引导。”。


4) 正在上载固件。

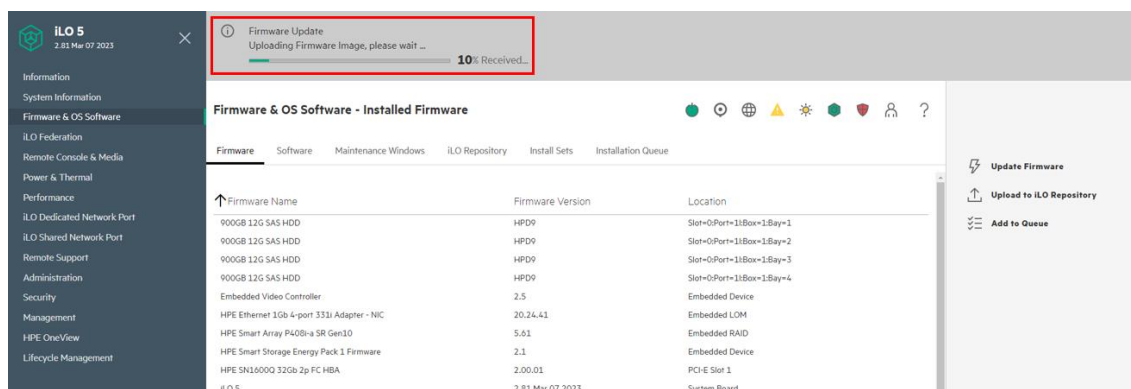

5) 正在更新固件。

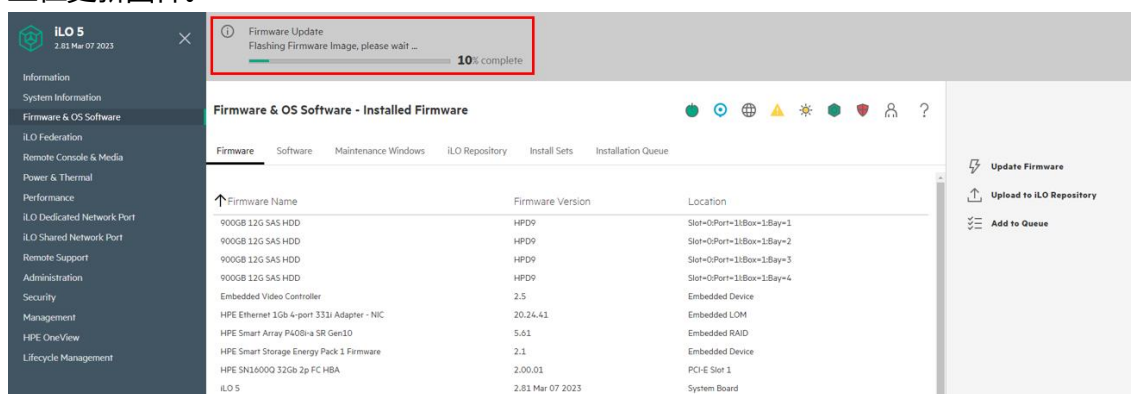

6) 更新完成后，将弹出“Firmware Update Completed”提示。服务器不会自动重启，iLO 将自动重启，重新登录即可。

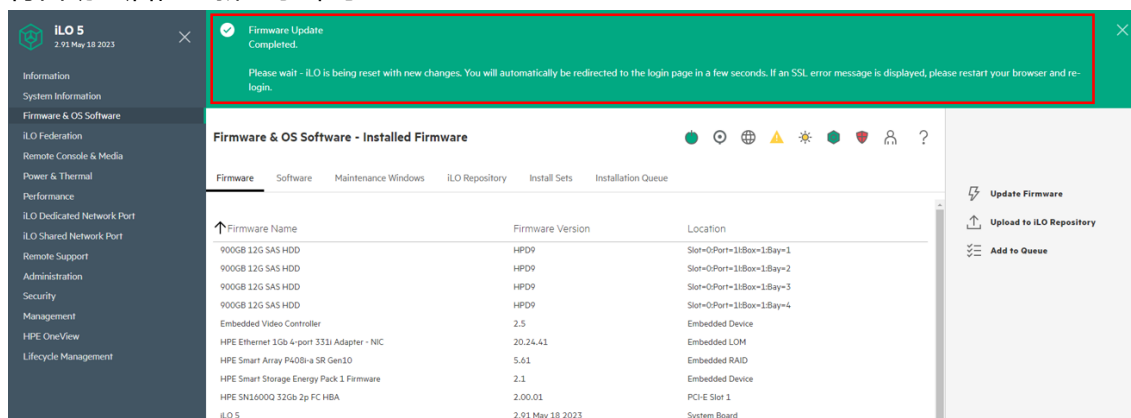

4. 检查固件更新后的版本

与本文< [2. 检查固件更新前的版本](#)>方法一致，完成更新后可到 iLO 5 相应页面查看更新后的固件版本，以验证更新是否成功。