

知 关于F5080-D、F5060-D、F5030-D、F5000-AK515升级注意事项

软件版本升级 刘宏宇 2019-10-29 发表

问题描述


关于F5080-D、F5060-D、F5030-D、F5000-AK515升级注意事项

解决方法

目前安全新一代F5000产品已经全面上线，设备外观与平时大家处理的安全产品有很大区别。需要注意在升级中此款设备分为**主控**和**机框**两个版本，并且**主控**和**机框**版本必须配套。

设备前面板介绍：

前面板1、2槽位为主控板槽位，主控板分别有一个Console口和ETH接口。设备默认情况下通过两个Console接口进入的是一个**主控操作平面**。

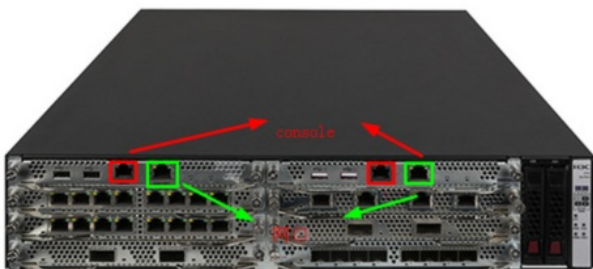

设备后面板介绍：

后面板有一个Console接口和四个网口，**但是设备开机后后面板Console口无法进入，连接Console口没有任何反应。**



升级介绍：

此设备存在**主控**、**机框**两个软件版本，LPU为机框版本，**需要Console线先连接后面板Console口，重启设备激活后面板Console口后升级。**升级方法与V7设备升级操作一致。

MPU版本为**主控**升级版本可以用Console线直接连接前面板Console口升级。

如果版本和机框版本不一致会有如下报错，分享给大家防止进坑。

```
BootWare Validating...
Press Ctrl+B to access EXTENDED-BOOTWARE MENU...
Loading the main image files...
Loading file flash:/f5080mpu-cmw710-system-E9606F02.bin.....
.....Done.
Loading file flash:/f5080mpu-cmw710-boot-E9606F02.bin.....Done.
Image file flash:/f5080mpu-cmw710-boot-E9606F02.bin is self-decompressing...
..Done.
System image is starting...

=====
This application is not correct, please select a right version.BOM:0231ASNT
System will be restarting...
=====

System is starting...
Press Ctrl+D to access BASIC-BOOTWARE MENU...
Press Ctrl+T to start heavy memory test.
Booting Normal Extended BootWare
The Extended BootWare is self-decompressing....Done.
```