HP/Aruba 2530、Aruba 2540系列交换机进入Monitor界面&选择分区启动

软件问题 孙轲 2019-10-29 发表

组网及说明

1. 配置需求或说明

1.1 适用产品系列

本案例适用于如：HP/Aruba 2530-8G/24G/48G PoE+ Switch、
HP/Aruba 2530-8/24 PoE+ Switch、HP/Aruba 2530-24G/48G Switch、
HP/Aruba 2530-8/24/48 Switch、Aruba 2540 24G/48G 4SFP+ Switch、
Aruba 2540 24G/48G PoE+ 4SFP+ Switch等系列的交换机。

1.2 组网图

无。

1.3 说明

HP ProCurve系列交换机存在Primary & Secondary分区，系统默认从Primary分区启动，如设备异常导致固件丢失，设备在开机启动阶段无法引导系统固件，并自动进入Monitor界面；在Monitor界面可以尝试通过切换Secondary分区启动系统。

配置步骤

1. 操作步骤-手动进入Monitor界面

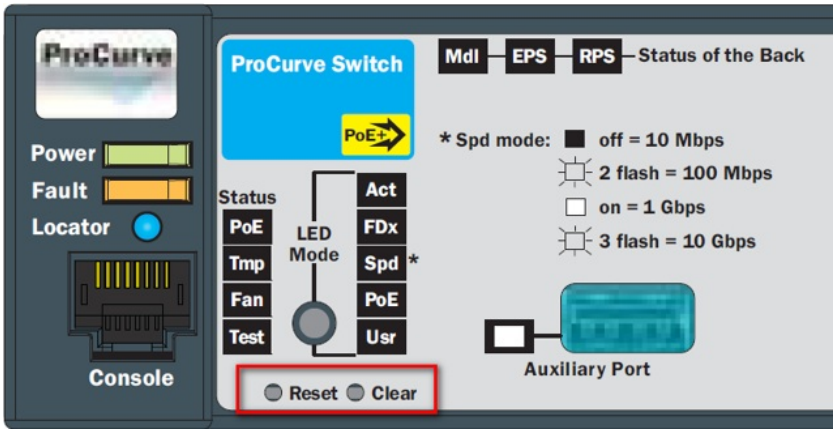

1. 使用尖头物体，同时按下交换机前面板的Reset和Clear按键。
2. 约2秒钟左右松开“Reset”按键，同时继续按住“Clear”按键。
3. 当自检灯(Test)的LED指示灯经过闪烁-直到常亮时，松开“Clear”按键，交换机进入monitor界面。
4. 输入JP 2，使用secondery固件启动系统

```
Copyright (c) 1995-2001 Hewlett-Packard Company. All rights reserved.

                        RESTRICTED RIGHTS LEGEND

Use, duplication, or disclosure by the Government is subject to restrictions
as set forth in subdivision (b) (3) (ii) of the Rights in Technical Data and
Computer Software clause at 52.227-7013.

    Hewlett-Packard Company, 3000 Hanover Street, Palo Alto, CA 94303

Enter h or ? for help.

=> JP 2
```

配置关键点