

H3C G5 服务器通过 HDM 挂载镜像 安装 Ubuntu Server 24.04 系统的安装方法

目录

一. 适用范围与注意事项.....	1
二. 安装准备.....	1
1. 系统兼容性查询.....	1
2. 系统安装介质获取.....	1
3. 阵列配置.....	1
4. 连接 HDM 与启用远程控制台.....	2
三. 安装步骤.....	2

一. 适用范围与注意事项

- 本文档旨在说明 H3C G5 系列服务器通过 HDM 安装系统的方法，并以 R4900 G5 服务器安装 Ubuntu Server 24.04 为例进行安装步骤说明。
安装过程中您可能需要借助其他工具完成部分操作。如需了解详细介绍，请参考本文档<安装准备>的内容查看。
- 实际情况是否适用本文档，请通过下面导航链接进行确认：
<https://zhiliao.h3c.com/Theme/details/208474>
- 提示：
本文档中的信息（包括产品，软件版本和设置参数）仅作参考示例，具体操作与目标需求设置请以实际为准。
本文档不定期更新维护，请以发布的最新版本为准。

二. 安装准备

1. 系统兼容性查询
具体确认方法请参考：<https://zhiliao.h3c.com/Theme/details/207728>
2. 系统安装介质获取
具体方法请参考：<https://zhiliao.h3c.com/Theme/details/210145>
3. 阵列配置

如果有配置阵列的需求，请在阵列配置完成后再安装系统。

具体阵列配置方法请参考：<https://zhiliao.h3c.com/Theme/details/208527>

4. 连接 HDM 与启用远程控制台

具体方法请参考：<https://zhiliao.h3c.com/Theme/details/210144>


三. 安装步骤

1. 挂载系统安装介质（以 H5 KVM 为例）


1.1 登录 HDM 并在首页启动 H5 KVM 远程控制台。




1.2 H5 KVM 界面打开后，点击右上方的选择文件。

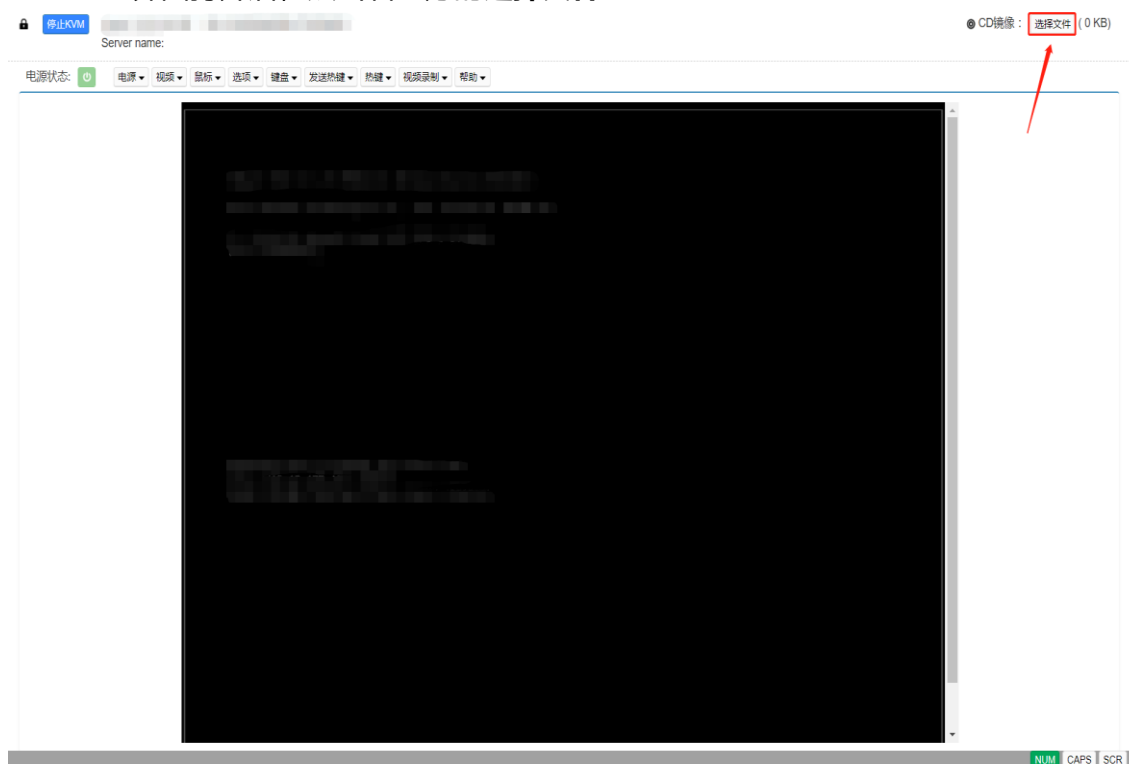

1.3 浏览到本地的镜像文件。

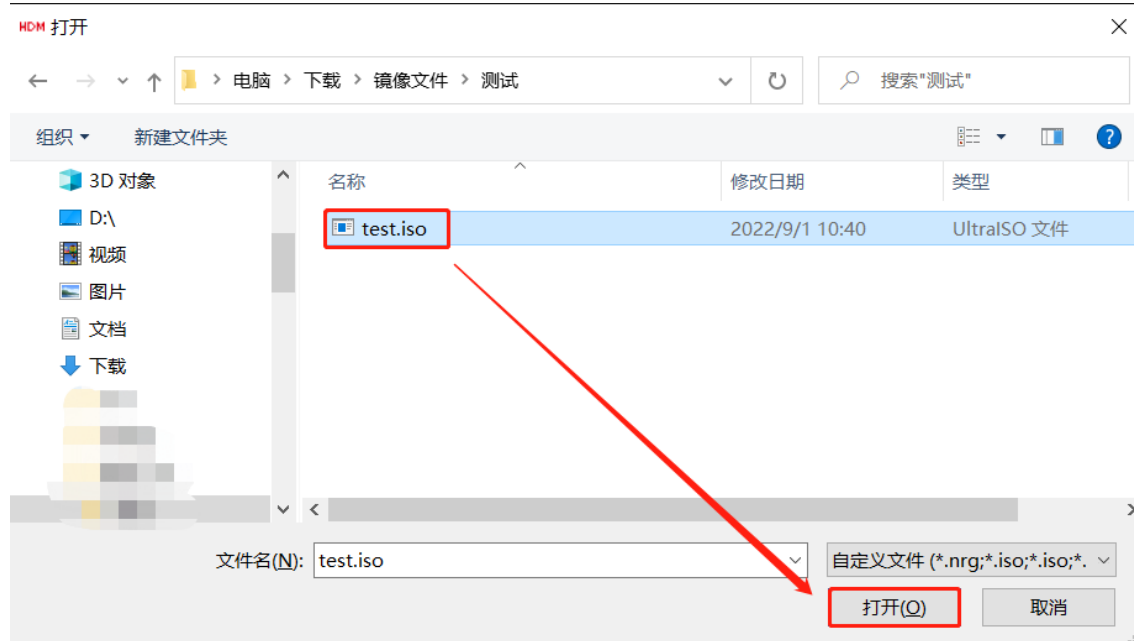

1.4 选定镜像文件后点击**开始连接**以完成挂载。

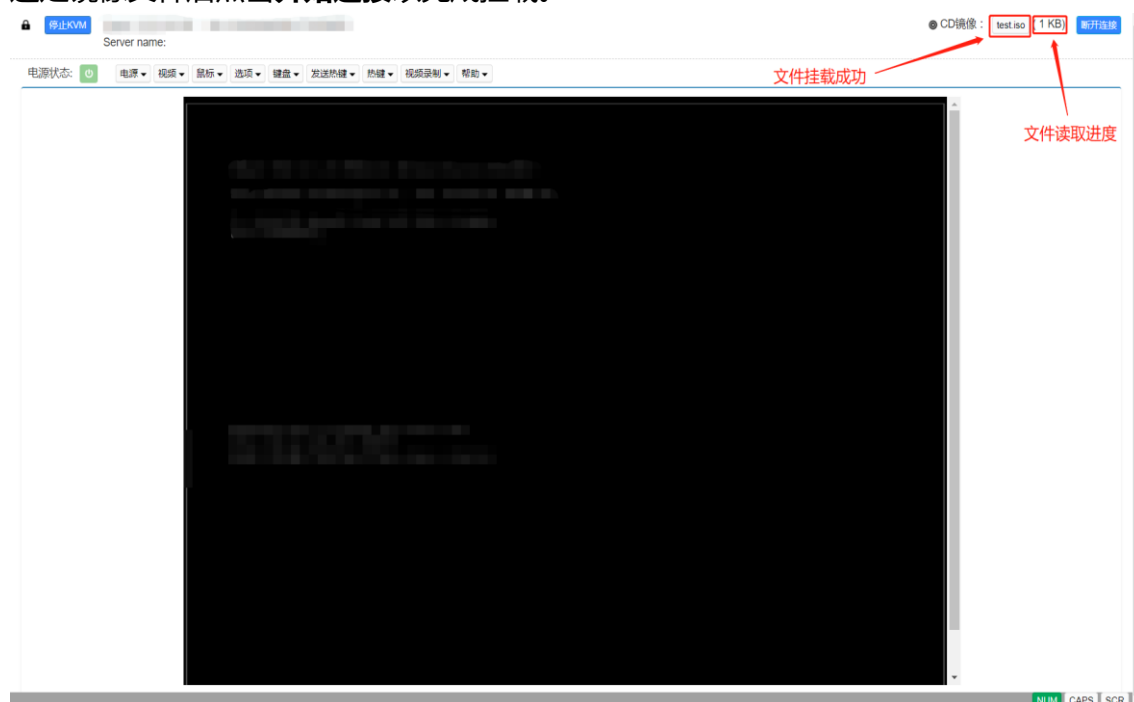

注：文件读取进度可能不会一次性全部加载，待开始引导系统文件后加载进度将继续读取。


2. 引导系统安装

2.1 启动服务器，在开机自检界面按下 **F7**，选择启动项。




2.2 选择 OS 镜像所在的介质。


本例中通过远程控制台挂载虚拟媒体，所以选择 **AMI Virtual CDROM 0** 。

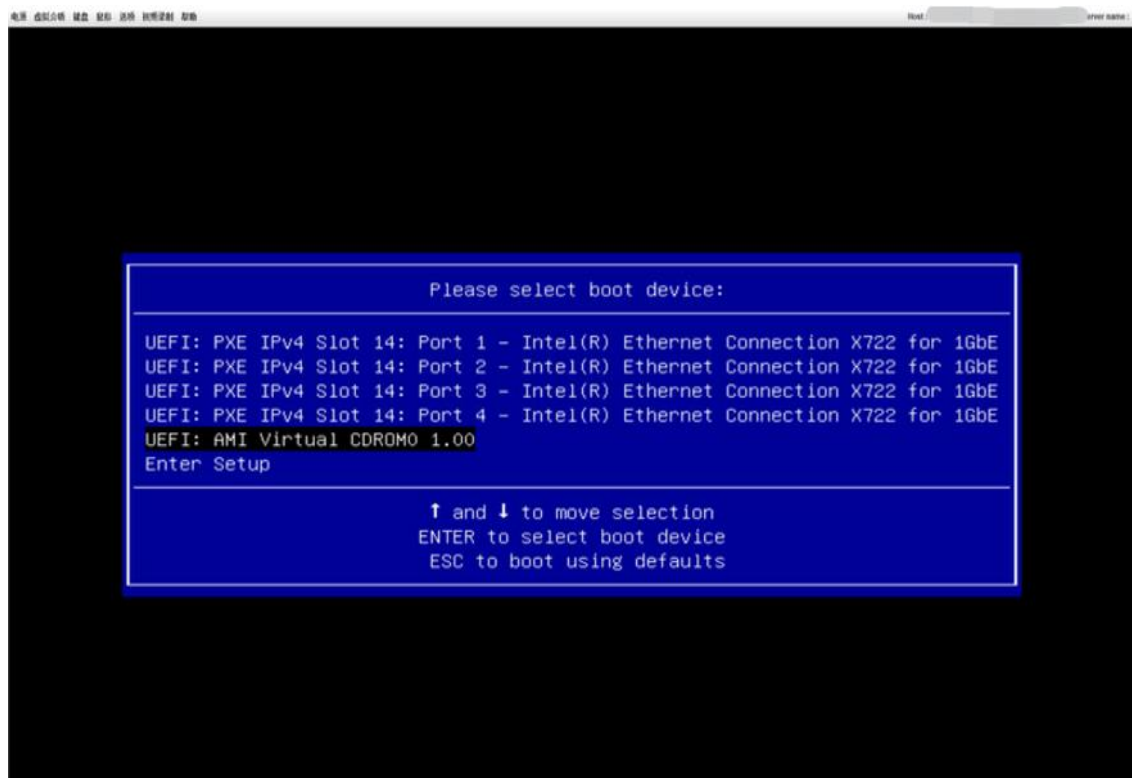

2.3 选择第一项 **Install Ubuntu Server** 后将开始 Ubuntu 系统的安装。

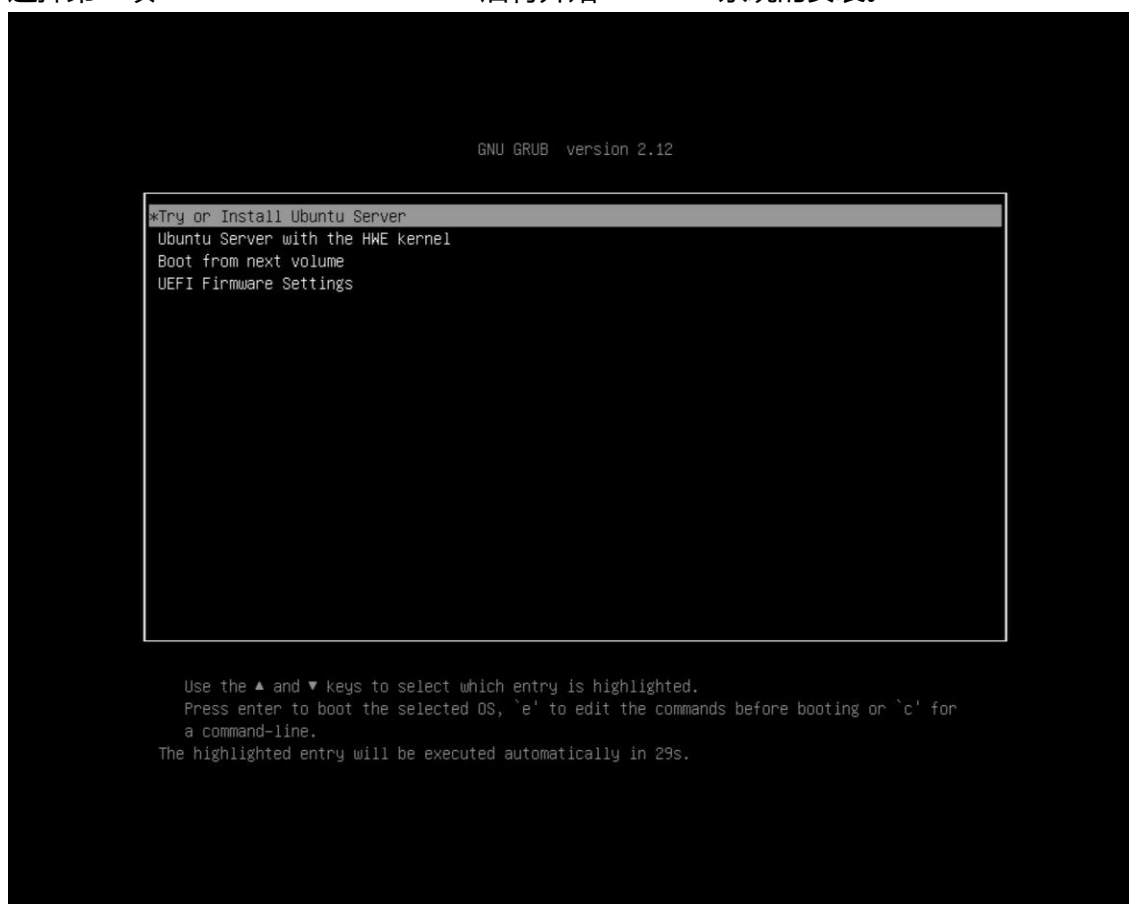

2.4 选择语言。

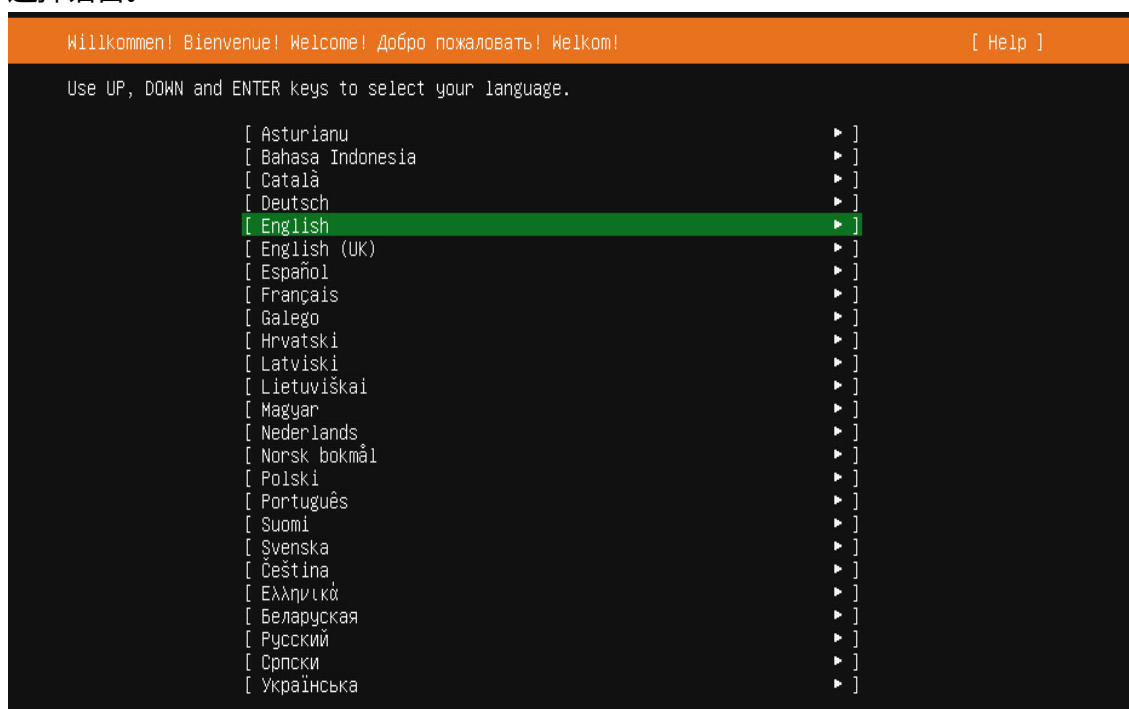

2.5 设置键盘布局，选择 **Done** 进入下一步。

Keyboard configuration [Help]

Please select your keyboard layout below, or select "Identify keyboard" to detect your layout automatically.

Layout: [English (US) ▼]

Variant: [English (US) ▼]

[Identify keyboard]

[Done]
[Back]

2.6 选择一个系统类型进行安装，选择 **Done** 进入下一步。

Choose the type of installation [Help]

Choose the base for the installation.

(X) Ubuntu Server

The default install contains a curated set of packages that provide a comfortable experience for operating your server.

() Ubuntu Server (minimized)

This version has been customized to have a small runtime footprint in environments where humans are not expected to log in.

Additional options

[] Search for third-party drivers

This software is subject to license terms included with its documentation. Some is proprietary. Third-party drivers should not be installed on systems that will be used for FIPS or the real-time kernel.

[Done]
[Back]

2.7 设置网络链接，选择 “Continue without network”，选择 **Done** 进入下一步。

Network connections
[Help]

Configure at least one interface this server can use to talk to other machines, and which preferably provides sufficient access for updates.

NAME	TYPE	NOTES
[ens16f0 DHCPv4	eth -	not connected ▶] 74:50:4e:d3:43:a4 / Intel Corporation / I350 Gigabit Network Connection (NIC-ETH360T-3S-4P)
[ens16f1 DHCPv4	eth -	not connected ▶] 74:50:4e:d3:43:a5 / Intel Corporation / I350 Gigabit Network Connection (NIC-ETH360T-3S-4P)
[ens16f2 DHCPv4	eth -	not connected ▶] 74:50:4e:d3:43:a6 / Intel Corporation / I350 Gigabit Network Connection (NIC-ETH360T-3S-4P)
[ens16f3 DHCPv4	eth -	not connected ▶] 10.12.175.31/22 74:50:4e:d3:43:a7 / Intel Corporation / I350 Gigabit Network Connection (NIC-ETH360T-3S-4P)
[ens3f0np0 DHCPv4	eth -	not connected ▶] bc:97:e1:e6:de:60 / Broadcom Inc. and subsidiaries / BCM57412 NetXtreme-E 10Gb RDMA Ethernet Controller
[ens3f1np1 DHCPv4	eth -	not connected ▶] bc:97:e1:e6:de:61 / Broadcom Inc. and subsidiaries / BCM57412 NetXtreme-E 10Gb RDMA Ethernet Controller
[Create bond ▶]		

[Done]
[Back]

2.8 设置代理服务器，可以根据需要是否配置，不需要进行配置，选择 **Done** 进入下一步。

Configure proxy
[Help]

If this system requires a proxy to connect to the internet, enter its details here.


Proxy address:

If you need to use a HTTP proxy to access the outside world, enter the proxy information here. Otherwise, leave this blank.


The proxy information should be given in the standard form of "http://[[user] [:pass]@]host[:port]/".

[Done]
[Back]

2.9 设置镜像源地址，在“Mirror address”输入框中输入镜像源地址，若无特殊要求默认后，选择**Done**进入下一步。

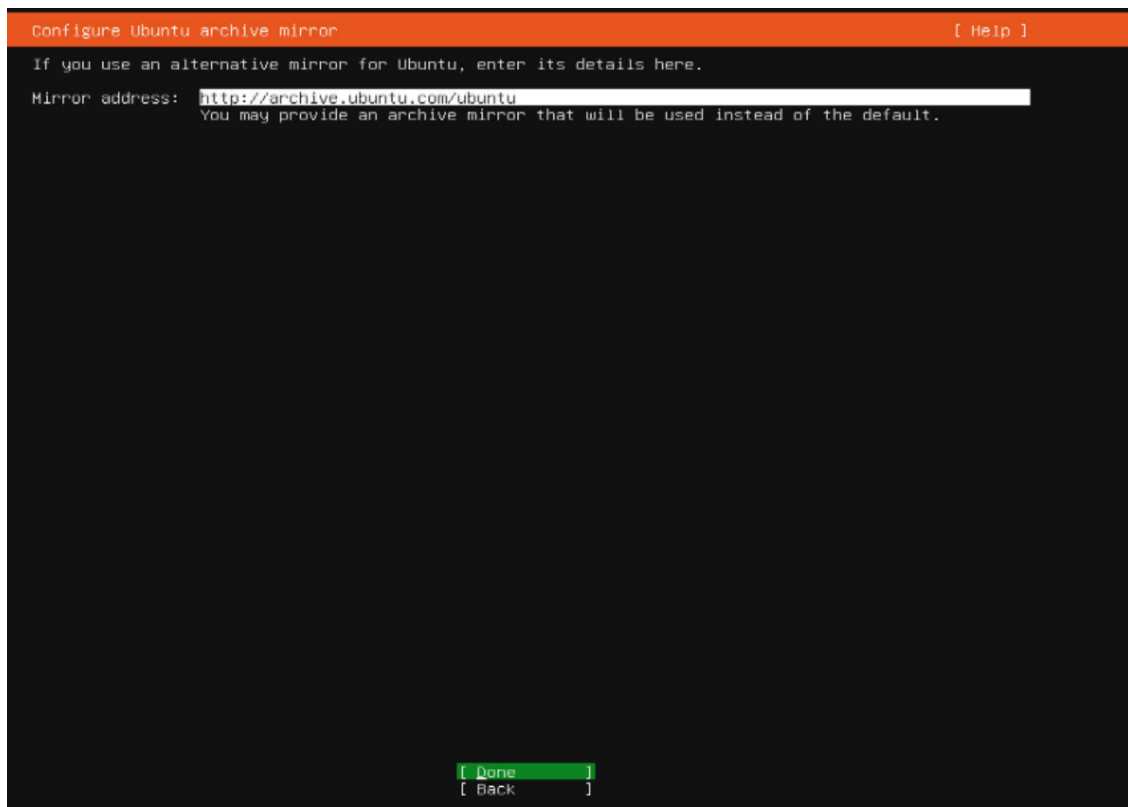


2.10 检查安装包更新，选择“Continue without updating”选项，按<Enter>键进入下一步。

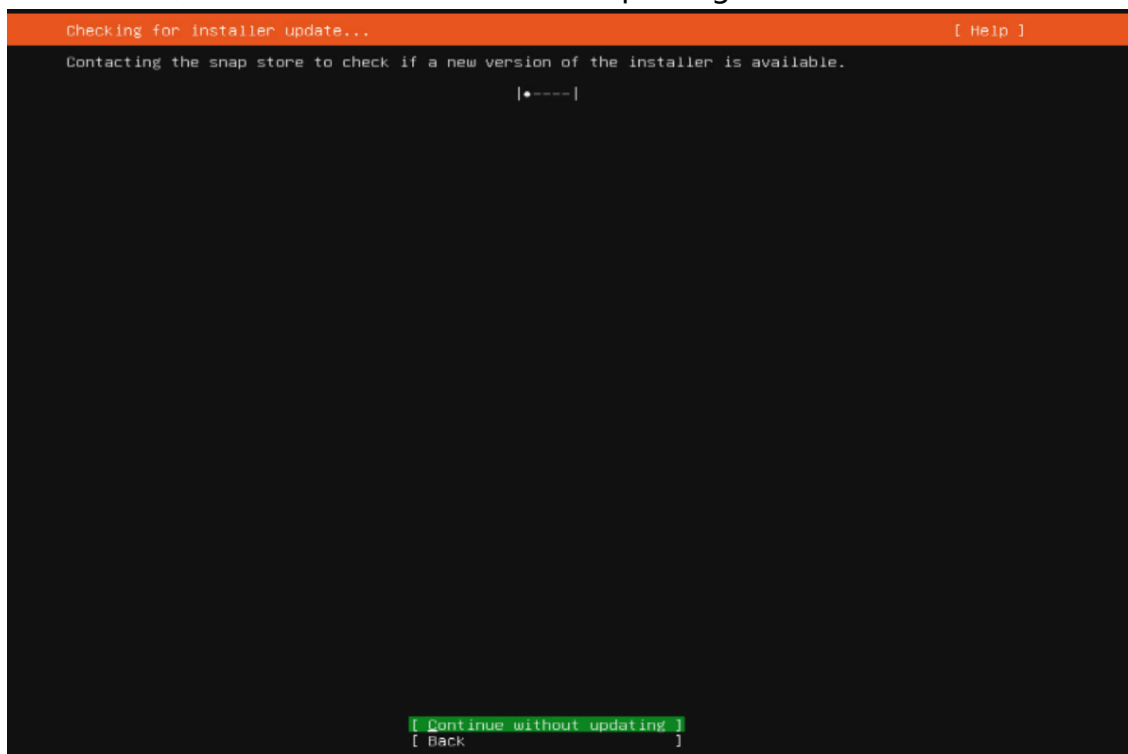


2.11 设置磁盘分区，可以选择自动或者手动分区。


- Use an entire disk 模式：选择一个磁盘后将光标移动到 **Done**，系统将按照默认设置对磁盘进行分区。
- Custom storage layout 模式：将光标移动到 **Done**，将进入手动分区设置界面。

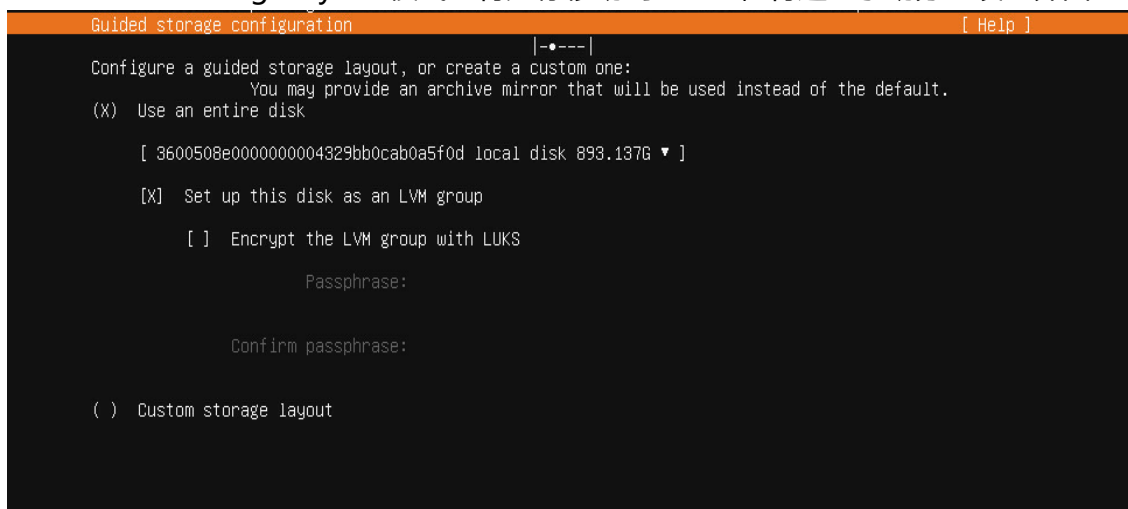


2.12 以 Use an entire disk 为例。

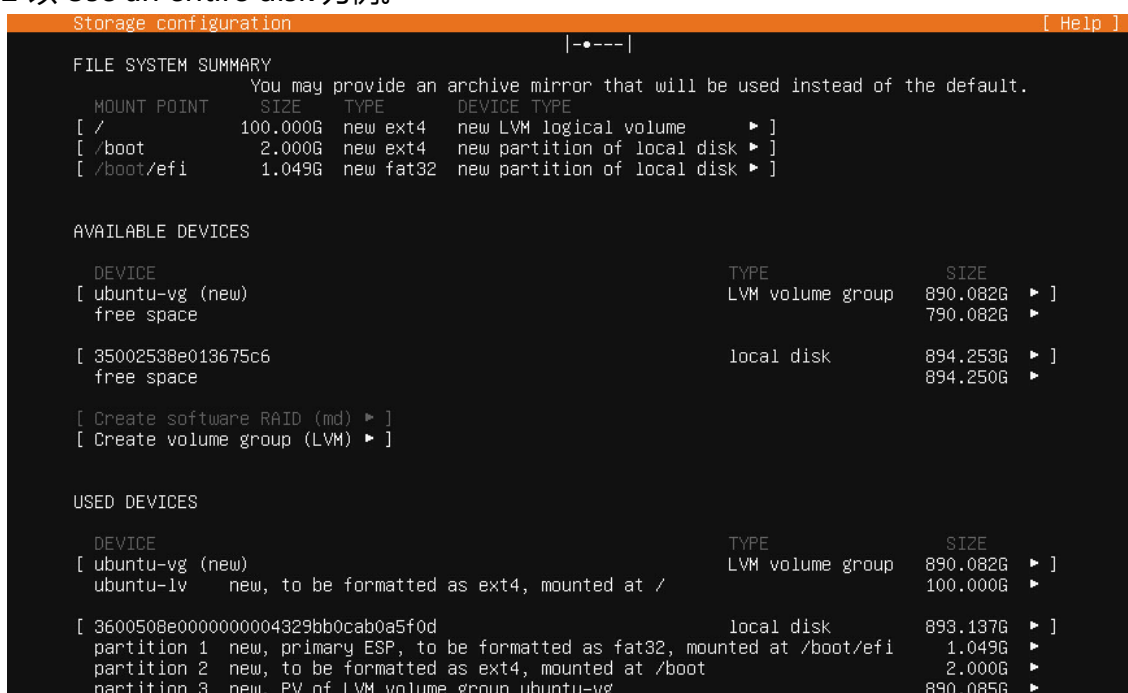

2.13 弹窗提示确认清除磁盘数据，选择 “Continue” 按<Enter>键进入下一步。

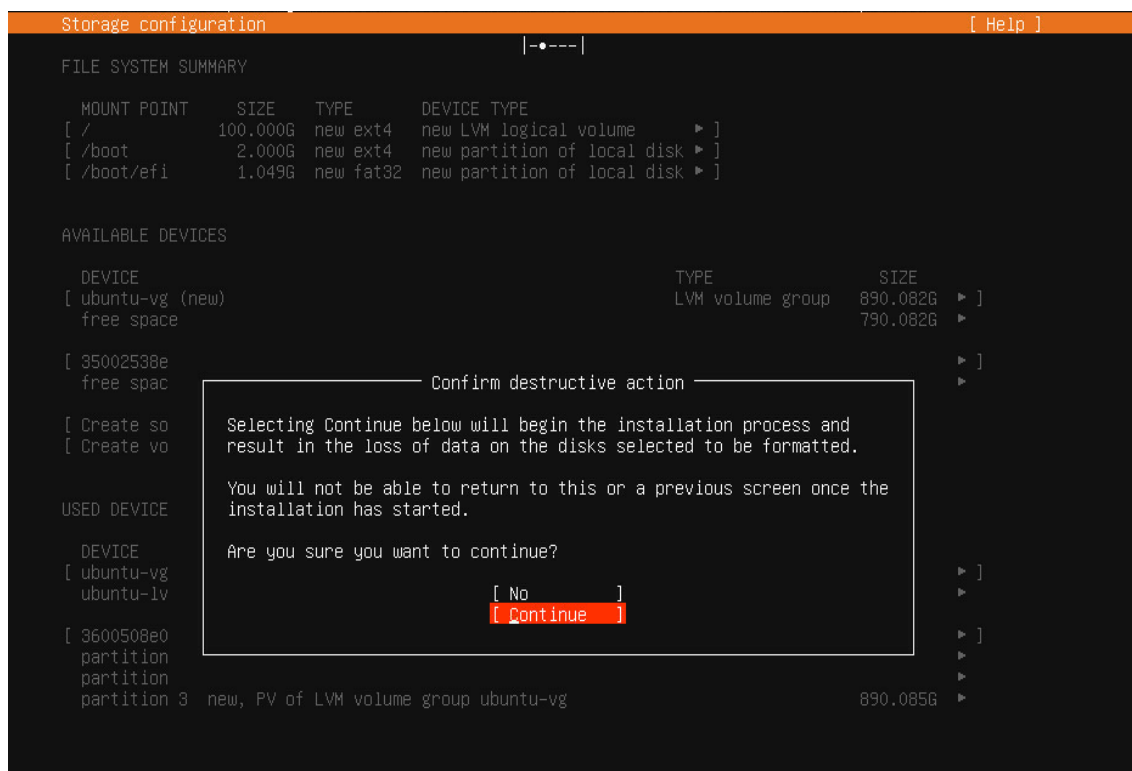


2.14 设置用户名、服务器名及密码，设置完成后，选择 **Done** 进入下一步。

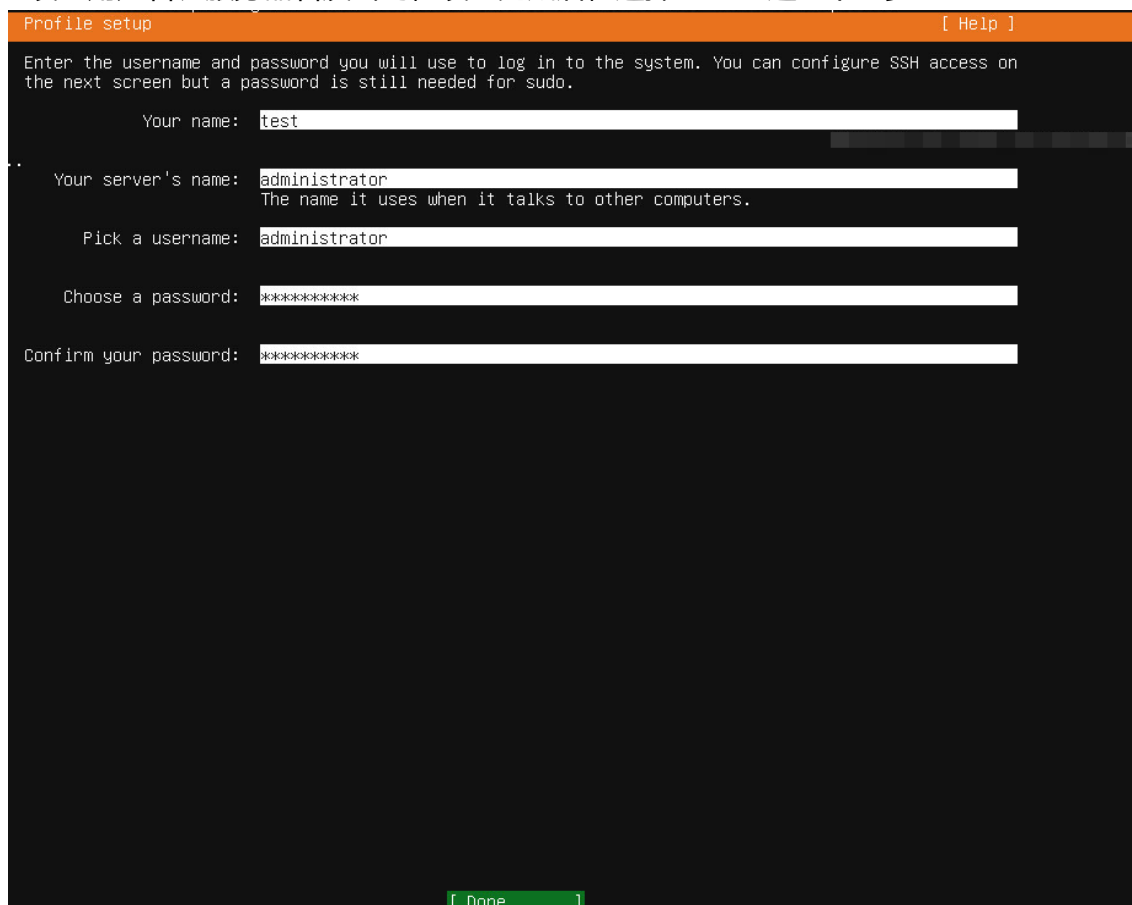


2.15 按<空格键>选择 “Install OpenSSH server”，选择 **Done** 进行安装。

注：需要安装 OpenSSH 服务，否则系统完成安装后无法使用 SSH。

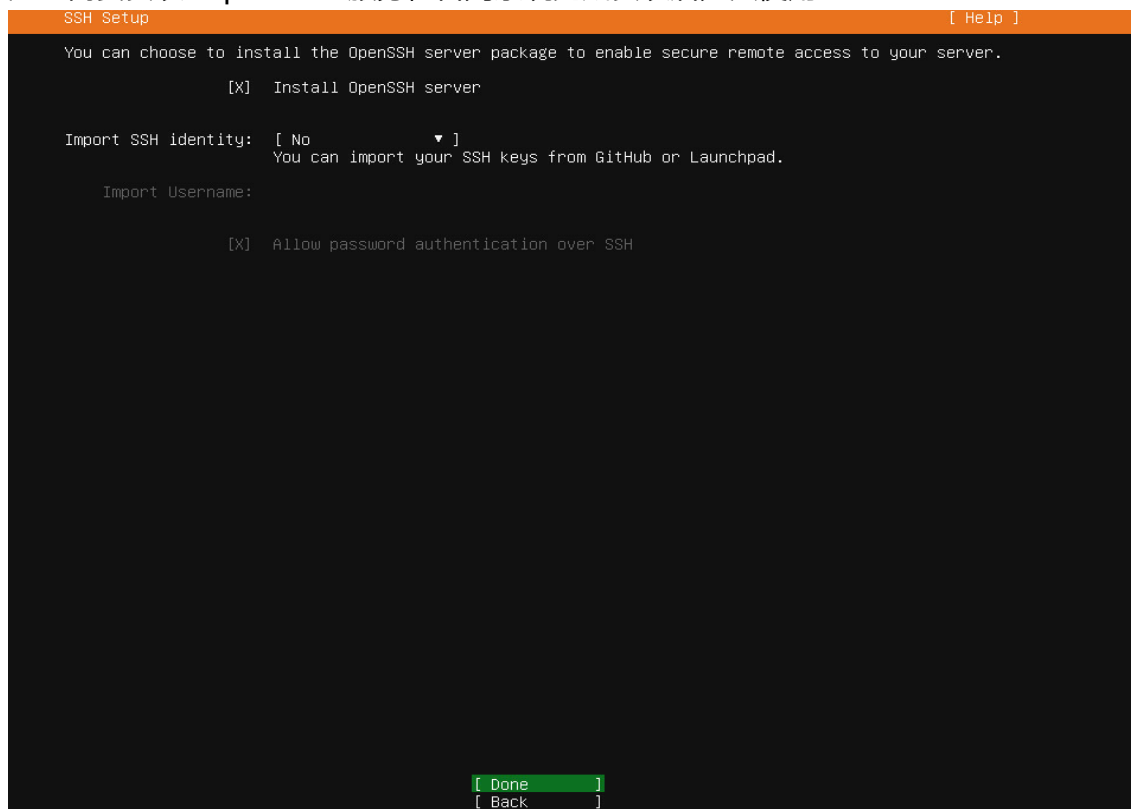

2.16 进行操作系统安装，操作系统安装需要等待一段时间，无需进行其他操作。

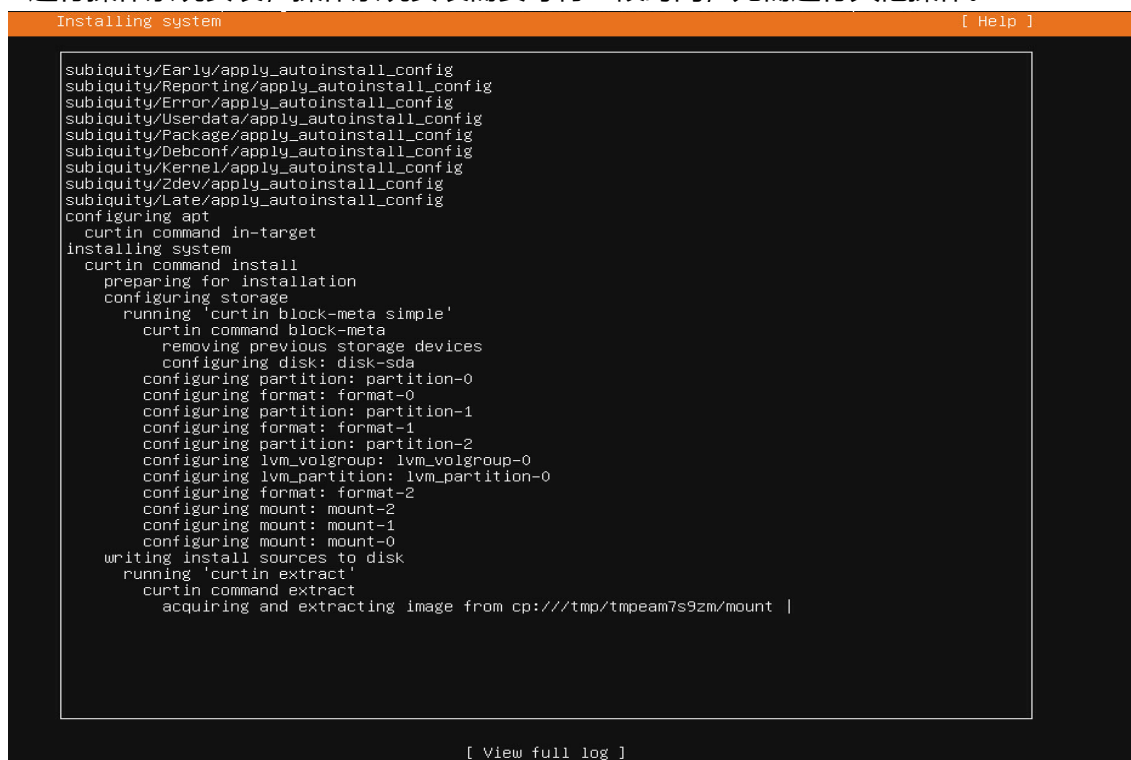

2.17 操作系统安装完成，选择“Cancel update and reboot”，按<Enter>键重启服务器。

```
Install complete! [ Help ]
    curtin command block-meta
    configuring partition: partition-2
    configuring format: format-2
    configuring mount: mount-2
    configuring mount: mount-1
    configuring mount: mount-0
    writing install sources to disk
    running 'curtin extract'
    curtin command extract
    acquiring and extracting image from cp:///tmp/tmpeam7s9zm/mount
    configuring installed system
    running 'mount --bind /cdrom /target/cdrom'
    running 'curtin curthooks'
    curtin command curthooks
    configuring apt configuring apt
    installing missing packages
    installing packages on target system: ['efibootmgr', 'grub-efi-amd64',
'grub-efi-amd64-signed', 'shim-signed']
    configuring iscsi service
    configuring raid (mdadm) service
    installing kernel
    setting up swap
    apply networking config
    writing etc/fstab
    configuring multipath
    updating packages on target system
    configuring pollinate user-agent on target
    updating initramfs configuration
    configuring target system bootloader
    installing grub to target devices
    finalizing installation
    running 'curtin hook'
    curtin command hook
    executing late commands
    final system configuration
    configuring cloud-init
    calculating extra packages to install
    installing openssh-server
    curtin command system-install
    downloading and installing security updates
    curtin command in-target /

[ View full log ]
[ Cancel update and reboot ]

Install complete! [ Help ]
    curtin command block-meta
    configuring mount: mount-2
    configuring mount: mount-1
    configuring mount: mount-0
    writing install sources to disk
    running 'curtin extract'
    curtin command extract
    acquiring and extracting image from cp:///tmp/tmpeam7s9zm/mount
    configuring installed system
    running 'mount --bind /cdrom /target/cdrom'
    running 'curtin curthooks'
    curtin command curthooks
    configuring apt configuring apt
    installing missing packages
    installing packages on target system: ['efibootmgr', 'grub-efi-amd64',
'grub-efi-amd64-signed', 'shim-signed']
    configuring iscsi service
    configuring raid (mdadm) service
    installing kernel
    setting up swap
    apply networking config
    writing etc/fstab
    configuring multipath
    updating packages on target system
    configuring pollinate user-agent on target
    updating initramfs configuration
    configuring target system bootloader
    installing grub to target devices
    finalizing installation
    running 'curtin hook'
    curtin command hook
    executing late commands
    final system configuration
    configuring cloud-init
    calculating extra packages to install
    installing openssh-server
    curtin command system-install
    downloading and installing security updates
    curtin command in-target \
    cancelling update

[ View full log ]
[ Rebooting... ]
```

2.18 在系统登录界面输入设置的账户名和密码，即可登录系统。

```
Ubuntu 24.04.2 LTS administrator tty1
administrator login: administrator
Password:
Welcome to Ubuntu 24.04.2 LTS (GNU/Linux 6.8.0-53-generic x86_64)

* Documentation:  https://help.ubuntu.com
* Management:    https://landscape.canonical.com
* Support:       https://ubuntu.com/pro

System information as of Fri Jul 25 04:02:19 PM UTC 2025

System load:  0.08               Swap usage:  0%               Users logged in: 0
Usage of /:   10.5% of 97.87GB   Temperature: 73.0 C
Memory usage: 1%                Processes:   1114

Expanded Security Maintenance for Applications is not enabled.
0 updates can be applied immediately.

Enable ESM Apps to receive additional future security updates.
See https://ubuntu.com/esm or run: sudo pro status

The programs included with the Ubuntu system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Ubuntu comes with ABSOLUTELY NO WARRANTY, to the extent permitted by
applicable law.

To run a command as administrator (user "root"), use "sudo <command>".
See "man sudo_root" for details.

administrator@administrator:~$ _
```