


S9500产品远程端口镜像配置

一、组网需求:

仅通过端口入镜像命令S9500实现支持类似RSPAN的跨设备镜像功能

二、组网图:

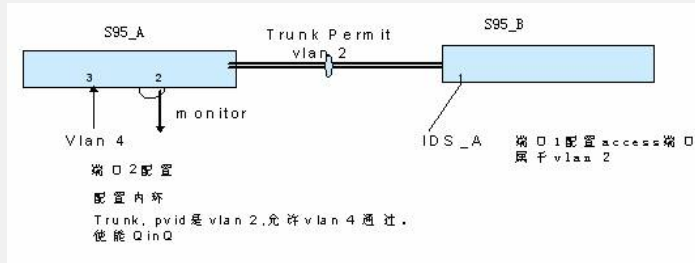

配置步骤:

S9505_B的配置

1.1 配置监控端口和镜像端口

```
mirroring-group 1 inbound GigabitEthernet1/1/1 mirrored-to GigabitEthernet1/1/48
```

1.2 配置镜像vlan和远程镜像vlan, 并加入相应的端口

```
vlan 100
```

```
portGigabitEthernet1/1/1
```

```
vlan 1000
```

```
port GigabitEthernet1/1/47 to GigabitEthernet1/1/48
```

1.3 配置反射端口和连接S95_A的端口

```
interface GigabitEthernet 1/1/47
```

```
port link-type trunk
```

```
port trunk permit vlan 1 100 1000
```

```
interface GigabitEthernet1/1/48
```

```
mac-address max-mac-count 0
```

```
port access vlan 1000
```

```
loopback internal
```

```
vlan-vpn enable
```

三、配置关键点:

1. 远程镜像Vlan必须为设备上不存在的Vlan, 否则容易引起环路;
2. 环回端口的mac地址学习必须关闭。