

MSR路由器 MPLS Carrier's Carrier基本功能的配置


关键词：MSR;MPLS;L3VPN;OSPF多实例;Carrier's Carrier

一、组网需求：

PEA和PEB为1级运营商的PE，分别连接2级运营商的出口CEA和CEB。

设备清单：MSR路由器4台

二、组网图：

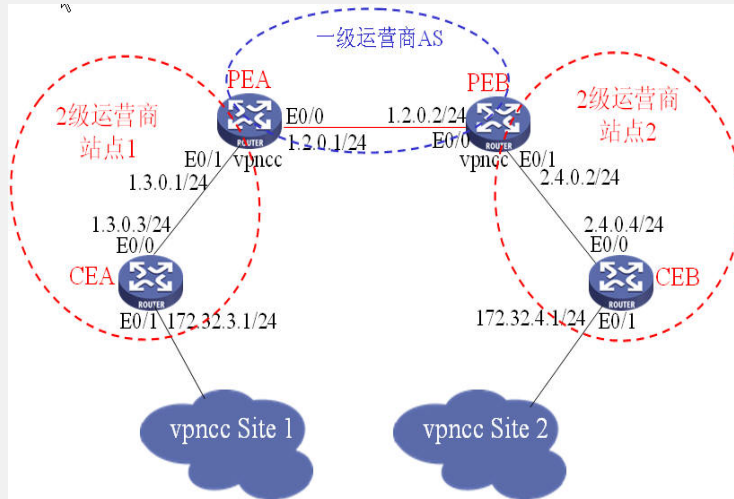

三、配置步骤：

适用设备和版本：MSR、Version 5.20, Beta 1105后所有版本。

CEA配置

```
#
router id 3.3.3.3
#
interface Ethernet0/0
port link-mode route
description connects to peA
ip address 1.3.0.3 255.255.255.0
#
interface Ethernet0/1
port link-mode route
description connects to vpnc site1
ip address 172.32.3.1 255.255.255.0
#
interface LoopBack0
description router id
ip address 3.3.3.3 255.255.255.255
#
ospf 1
area 0.0.0.0
network 3.3.3.3 0.0.0.0
network 1.3.0.0 0.0.0.255
network 172.32.3.0 0.0.0.255
#
```

PEA配置

```
#
router id 1.1.1.1
#
ip vpn-instance vpnc
route-distinguisher 1:1
```

```

vpn-target 1:1 export-extcommunity
vpn-target 1:1 import-extcommunity
#
mpls lsr-id 1.1.1.1
#
mpls
#
mpls ldp
#
interface Ethernet0/0
port link-mode route
description connects to peB
ip address 1.2.0.1 255.255.255.0
mpls
mpls ldp
#
interface Ethernet0/1
port link-mode route
description connects to ceA
ip binding vpn-instance vpncc
ip address 1.3.0.1 255.255.255.0
#
interface LoopBack0
description router id
ip address 1.1.1.1 255.255.255.255
#
interface LoopBack1
description vpncc's router id //用于OSPF多实例的router id
ip binding vpn-instance vpncc
ip address 1.0.0.1 255.255.255.255
#
bgp 1
undo synchronization
peer 2.2.2.2 as-number 1
peer 2.2.2.2 connect-interface LoopBack0
#
ipv4-family vpv4
peer 2.2.2.2 enable
#
ipv4-family vpn-instance vpncc
import-route ospf 2
#
ospf 1
area 0.0.0.0
network 1.1.1.1 0.0.0.0
network 1.2.0.0 0.0.0.255
#
ospf 2 router-id 1.0.0.1 vpn-instance vpncc
import-route bgp
area 0.0.0.0
network 1.0.0.1 0.0.0.0
network 1.3.0.0 0.0.0.255
#
PEB配置
#
router id 2.2.2.2
#
ip vpn-instance vpncc
route-distinguisher 2:1
vpn-target 1:1 export-extcommunity
vpn-target 1:1 import-extcommunity
#
mpls lsr-id 2.2.2.2
#

```

```

mpls
#
mpls ldp
#
interface Ethernet0/0
port link-mode route
description connects to peA
ip address 1.2.0.2 255.255.255.0
mpls
mpls ldp
#
interface Ethernet0/1
port link-mode route
description connects to ceB
ip binding vpn-instance vpncc
ip address 2.4.0.2 255.255.255.0
#
interface LoopBack0
description router id
ip address 2.2.2.2 255.255.255.255
#
interface LoopBack1 //用于OSPF多实例的router id
description vpncc's router id
ip binding vpn-instance vpncc
ip address 2.1.1.1 255.255.255.255
#
bgp 1
undo synchronization
peer 1.1.1.1 as-number 1
peer 1.1.1.1 connect-interface LoopBack0
#
ipv4-family vpnv4
peer 1.1.1.1 enable
#
ipv4-family vpn-instance vpncc
import-route ospf 2
#
ospf 1
area 0.0.0.0
network 2.2.2.2 0.0.0.0
network 1.2.0.0 0.0.0.255
#
ospf 2 router-id 2.1.1.1 vpn-instance vpncc
import-route bgp
area 0.0.0.0
network 2.4.0.0 0.0.0.255
network 2.1.1.1 0.0.0.0
#
CEB配置
#
router id 4.4.4.4
#
interface LoopBack0
description router id
ip address 4.4.4.4 255.255.255.255
#
interface Ethernet0/0
port link-mode route
description connects to peB
ip address 2.4.0.4 255.255.255.0
#
interface Ethernet0/1
port link-mode route
description connects to vpncc site2

```

```
ip address 172.32.4.1 255.255.255.0
#
ospf 1
area 0.0.0.0
network 4.4.4.4 0.0.0.0
network 2.4.0.0 0.0.0.255
network 172.32.4.0 0.0.0.255
#
```

四、配置关键点：

1. PE和CE之间运行OSPF多实例，注意引入BGP的vpn路由；
2. PE的BGP注意引入OSPF多实例的路由。