

知 S5110 收集诊断信息文件方法 (V5 WEB版)

产品特性 韦家宁 2020-04-10 发表

组网及说明

S5110交换机收集诊断信息的方法有两种，分别是网页版和命令行版，以下是网页版的收集方法：

S5110版本信息如下：

H3C Comware Platform Software

Comware Software, Version 5.20.99, Release 1114

Copyright (c) 2004-2017 New H3C Technologies Co., Ltd. All rights reserved.

H3C S5110-52P uptime is 66 weeks, 4 days, 19 hours, 55 minutes

H3C S5110-52P

128M bytes DRAM

32M bytes Flash Memory

Config Register points to Flash

Hardware Version is Ver.A

Bootrom Version is 121

[SubSlot 0] 48GE+4SFP Hardware Version is Ver.A

配置步骤

S5110要先开启WEB功能，并创建相应用户和赋予权限，可参考如下配置。

```
[H3C]ip https enable
```

```
[H3C]ip http enable
```

```
[H3C]local-user admin
```

```
[H3C-luser-admin]password simple admin
```


```
[H3C-luser-admin]service-type web
```

```
[H3C-luser-admin]authorization-attribute level 3
```


```
[H3C-luser-admin]quit
```

登录网页版：


← → 🔍 不安全 | 10.189.248.252/web/service/login?lang=1

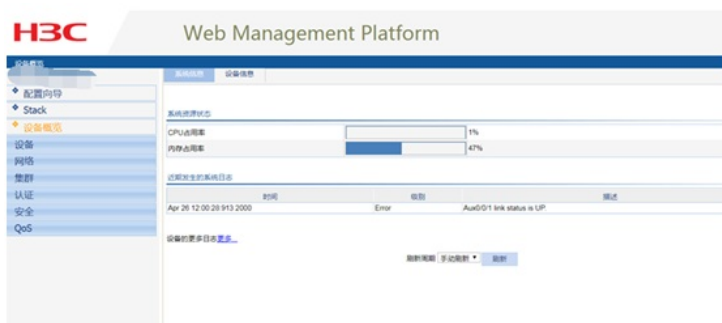


点击“设备”-“设备维护”

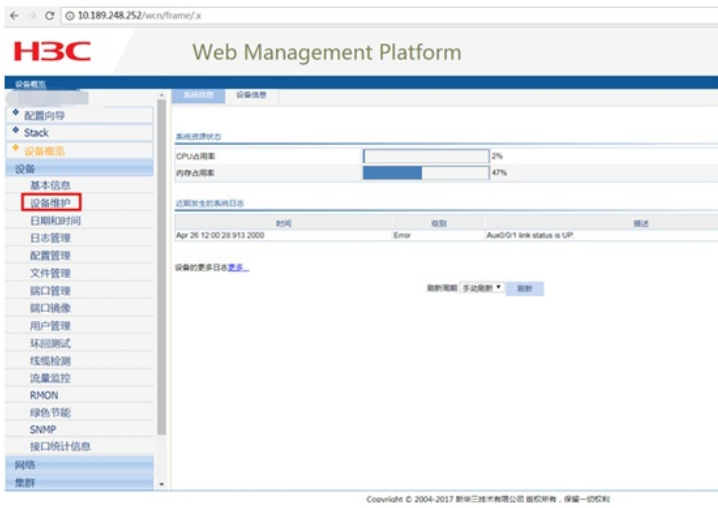


点击“诊断信息”

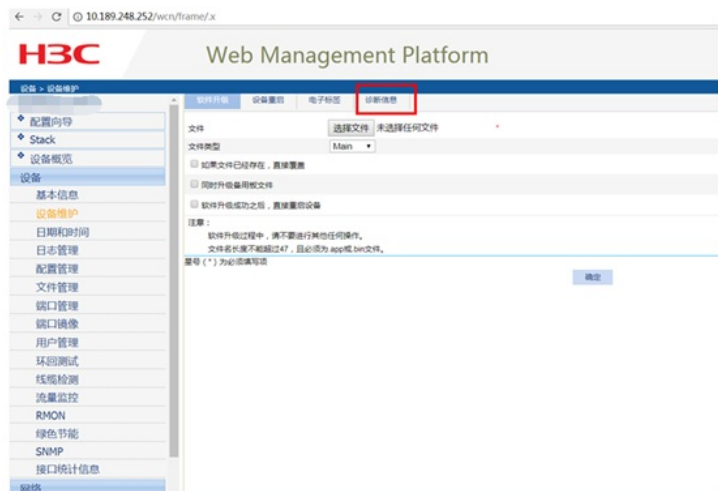


点击“生成诊断信息文件”

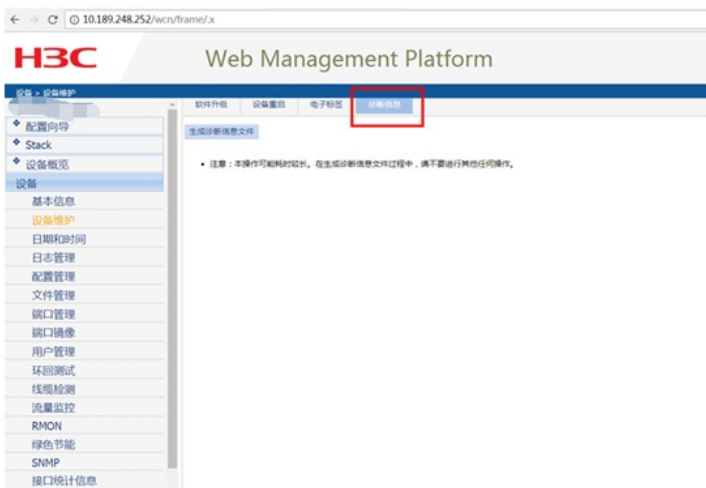


正在生成

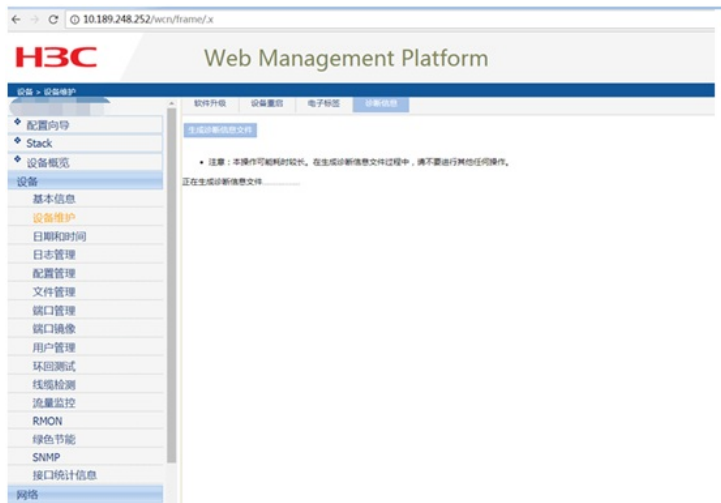

生成完成，“点击下载”

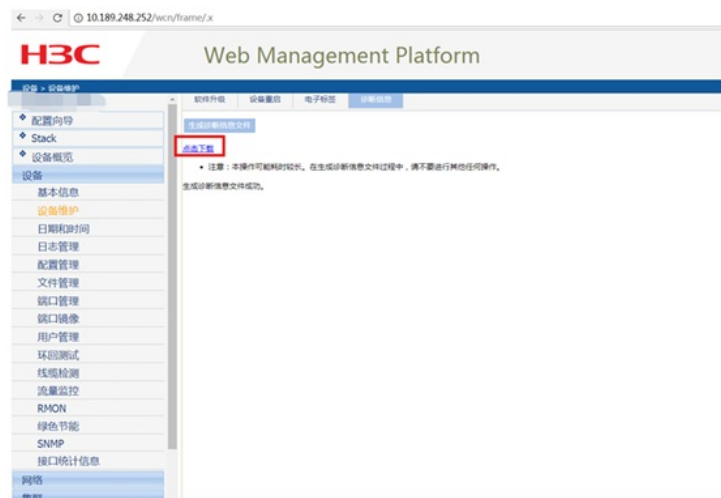

下载完成

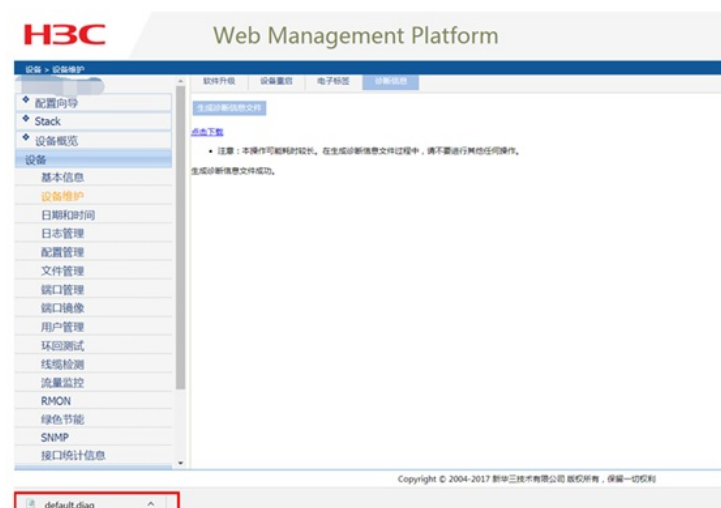

至此，S5110 诊断信息文件收集（V5 WEB）版已完成！

配置关键点