


### AR28/AR46系列路由器pos中继的典型配置

#### 【需求】

单台路由器实现POS中继的功能。在一台路由器上既实现POS接入功能，也要实现POS中继的功能。

#### 【组网图】

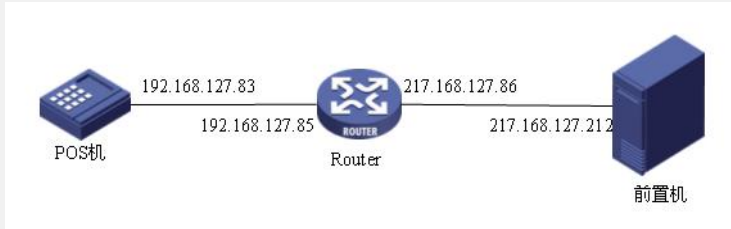

#### 【配置脚本】

##### Router配置脚本

```
#
sysname H3C
#
cpu-usage cycle 1 min
#
pos-server enable
pos-server app tcp 0 218.168.127.212 9000 //配置服务应用
pos-server app tcp 1 218.168.127.212 9001
pos-server app tcp 2 218.168.127.212 9002
pos-server map 0900 0 //配置映射
pos-server map 0901 1
pos-server map 0902 2
#
web set-package force flash:/http.zip
#
radius scheme system
#
domain system
#
local-user admin
password simple admin
service-type telnet terminal
level 3
service-type ftp
relay-pos template template
#
relay-pos template test //配置POS中继模版
listen-port 4000
app 0 218.168.127.212 9000 192.168.127.83
app 1 218.168.127.212 9001 192.168.127.83
app 2 218.168.127.212 9002
map 0900 0
map 0902 2
#
interface Fcm2/0
async mode pos 1
shutdown
#
interface Fcm2/1
async mode pos 2
shutdown
#
interface Fcm2/2
async mode pos 3
shutdown
#
interface Fcm2/3
async mode pos 4
shutdown
#
interface Fcm2/4
async mode pos 5
shutdown
#
interface Fcm2/5
async mode pos 6
shutdown
#
interface Fcm3/0
```

```
interface Fcm3/0
  async mode pos 7
  shutdown
#
interface Fcm3/1
  async mode pos 8
  shutdown
#
interface Fcm3/2
  async mode pos 9
  shutdown
#
interface Fcm3/3
  async mode pos 10
  shutdown
#
interface Fcm3/4
  async mode pos 11
  shutdown
#
interface Fcm3/5
  async mode pos 12
  shutdown
#
interface Aux0
  async mode flow
#
interface Ethernet0/0
  ip address 218.168.127.86 255.255.255.0
#
interface Ethernet0/1
  ip address 192.168.127.85 255.255.255.0
#
interface NULL0
#
  FTP server enable
#
  snmp-agent
  snmp-agent local-engineid 000063A27F0000010000264B
  snmp-agent community read public
  snmp-agent community write private
  snmp-agent sys-info version all
#
  user-interface con 0
  user-interface tty 33 38
  user-interface tty 49 54
  user-interface aux 0
  user-interface vty 0 4
  authentication-mode scheme
#
```